


0.7 Cu.Ft. Countertop Microwave

CM-M201K(BK) / CM-M201K(WH)



Comfee 0.7 Cu.Ft. Countertop Microwave (Black/White)

 comfee

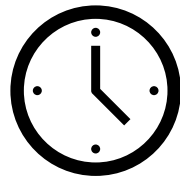

- Turn off all the microwave beeps by pressing the sound on/off button.
- One touch cooking for six common foods.
- LED digital control panel with interior light.
- 700 Watts 11 Power settings.
- Removable 10-inch glass turntable.
- Dimensions:

Product (W*D*H): 17.3" x 13" x 10.2"

Internal (W*D*H): 12.05" x 11.97" x 8.11"

Multiple Cooking Options

Conveniently defrost, cook or reheat foods with this fully featured compact microwave. Cooking options include one touch express cooking for up to six minutes, pre-programmed cooking for common foods, and time/power level cooking. Frozen foods can be defrosted by time or weight, depending on your needs.

Thoughtful Features

This microwave has many user-friendly features. Turn off all the microwave beeps by pressing the sound on/off button. Child safety lock keeps the microwave away from curious hands. To prevent children or others from using the microwave, use the lock function.

Easy One-Touch Buttons

Enjoy one touch cooking for six of the most popular microwaved foods. Press the desired pre-programmed button and the microwave automatically starts. Easily make popcorn, potato, pizza, frozen vegetables, or reheat a beverage or dinner plate.

Express Cooking

The large LED digital display has a clock function and can also display a kitchen timer as well as the cooking time remaining. The microwave can be turned on for one to six minutes at 100 percent power by simply touching the number of minutes you would like to cook.

Comfee 0.7 Cu.Ft. Countertop Microwave (Black/White)

comfee




SPECIFICATIONS

Content	Parameter
Model:	CM-M201K(BK)/CM-M201K(WH)
Rated voltage :	120V-60Hz
Rated Input Power(Microwave) :	1050W
Rated Output Power(Microwave) :	700W
Oven Capacity :	0.7 CU.FT.
Turntable Diameter :	Ø10 inch
External Dimensions:	17.3*13.1*10.2 inch
Net Weight :	Approx. 20.2 lbs

Installation

 1. Select a level surface that provide enough open space for the intake and/or outlet vents.

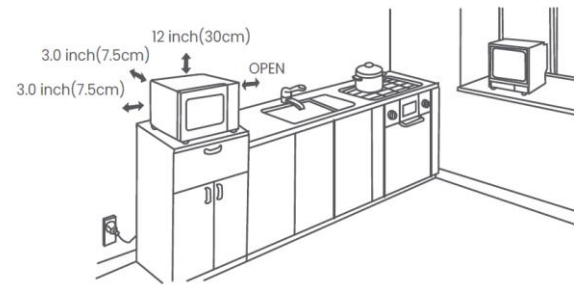

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.

- (1) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (2) Do not remove the legs from the bottom of the oven.
- (3) Blocking the intake and/or outlet openings can damage the oven.
- (4) Place the oven as far away from radios and TV as possible.

Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.