

**comfee'**

# ELECTRIC KETTLE

Instruction Manual

CKT003



IMPORTANT NOTE: For your safety and continued enjoyment of this product, always read the instruction Manual carefully before using.

# CONTENTS

IMPORTANT SAFEGUARDS .....	1
SPECIFICATIONS .....	3
PRODUCT OVERVIEW .....	4
OPERATION INSTRUCTIONS .....	5
CLEANING AND MAINTENANCE .....	6
TROUBLESHOOTING .....	7
SERVICE AND SUPPORT .....	8

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions.

## WARNING

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- To protect against fire, electrical shock and injury to persons do not immerse cord, plugs, or other live parts in water or other liquid.
- Do not touch hot surfaces. Use handles or knobs.
- Scalding may occur if the lid is removed during the brewing cycles.
- Do not use outdoor. Household use only.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use appliance for other than intended use.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.  
If a longer detachable power-supply cord or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
  - If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.  
Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the stand provided.
- CAUTION: Insure that the appliance is switched off before removing it from its stand.
- Warning - avoid spillage on the stand connector

## SAVE THESE INSTRUCTIONS

# SPECIFICATIONS

Product Model	CKT003
Rated Voltage	120V~ 60Hz
Rated Power	1500W
Capacity	1.7L


# PRODUCT OVERVIEW

## Brief Introduction

Rational design, bring convenience and enjoyment to your life

- Rapid boiling, time-saving and energy-saving.
- Removable filter to keep the water clean of any foreign matter.
- Steam control to switch the kettle off after boiling.
- Automatically shuts off for boil-dry protection.
- 360 Rotational power base.
- Easy-to-read water-level indication mark.

## Parts Name

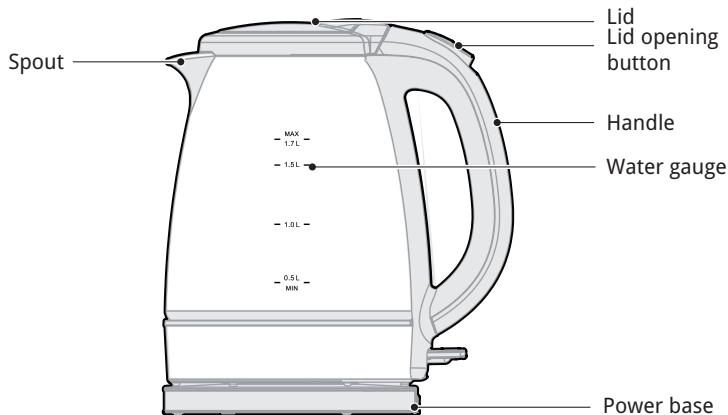

## NOTE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

# OPERATION INSTRUCTIONS

## How To Use

For the first time to use or no use for a long time, it is recommended that you fill to the maximum level mark with fresh tap water, boil and empty the kettle at least 2 times to clear kettle of any tiny particles. DO NOT drink initial boiled water.

1. Press the lid lock on the handle, and you can open it.
2. Remove the kettle from the base to the filling place. Fill the kettle with desired amount (no less than the minimum and no more than the maximum.) Put back the lid; place the kettle back on the base unit.
3. Connect the plug into a power outlet (120V,AC), switch the kettle on by pressing down the switch. The light will illuminate to indicate the kettle is heating.
4. The kettle will automatically switch off once the water has boiled and the neon light goes off.
5. Lift the kettle from the base, and you can pour out the water into container.

# CLEANING AND MAINTENANCE

## ● NOTE

1. To extend the life of your kettle, please clean the mineral deposits in the kettle regularly.
2. Unplug your kettle and allow it to cool before cleaning.
3. Wipe the kettle and base of unit with a soft, damp cloth. Be sure that the electric kettle socket is kept dry. Dry all parts after every use.
4. Never immerse kettle or power base in water.
5. **Removable Scale Filter** This kettle has a scale filter inside for clean water. The filter can be removed by grasping it and pulling upward. Run under hot water and rub with a clean cloth or brush.
6. Fill the kettle with 0.5L white vinegar and the remainder with water and allow to stand for over 1 hours ;
7. Empty the solution from the kettle. Wipe off the deposits remained with damp cloth.
8. Fill the kettle with clean water, bring to boil and then discard the water. Repeat the process and the kettle will be ready to use;
9. If necessary, repeat the operations above for several times;
10. The surface of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.
11. Any other servicing should be performed by an authorized service representative.

# TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
Indicator light does not work	The plug is not inserted properly	Check plug
	Loose connecting wire	Send to the after-sales service point for maintenance
	The lamp is broken	Send to the after-sales service point for maintenance
Other problems	Other faults of the product	Send to the after-sales service point for maintenance

 Any other servicing should be performed by an authorized service representative.

# SERVICE AND SUPPORT

## 1 YEAR LIMITED WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a one (1) year from the date of delivery. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option;

however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover wear from normal use, and operation doesn't conformity with the instruction manuals, or damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim.

This warranty is void if products is used for other than single family household use or subjected to any voltage and wave for mother than as specified on the label.

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchant-ability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty.

In the Event of a warranty period claim, question, comments or if service is required for this product, please contact us at the following:

Parsippany, NJ 07054  
Toll Free: 1-866-646-4332

Amazon Store:  
<https://www.amazon.com/comfee>  
Tel: 866-646-4332  
E-mail: [officialservice@comfeeappliance.com](mailto:officialservice@comfeeappliance.com)

Made in China



**comfee'**  
*... is how i feel !*