


comfee'

Front Loading Washing Machine

Instruction Manual

CFE10W60A/W-IT

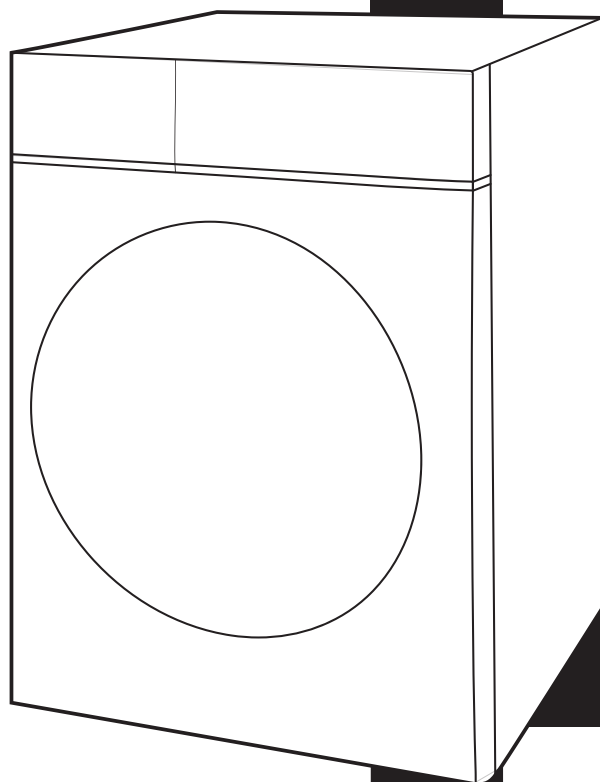

Read This Manual: Read all instructions and explanations for the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use.

If the appliance is sold or passed on, ensure that the new owner always receives this operation instructions.

THANK YOU LETTER

Thank you for choosing us! Before using your new product, please read this user manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	07
PRODUCT OVERVIEW	08
QUICK START GUIDE	09
PRODUCT INSTALLATION	12
OPERATION INSTRUCTIONS	16
CLEANING AND MAINTENANCE	29
TROUBLE SHOOTING	33
DISPOSAL AND RECYCLING	34

SAFETY INSTRUCTIONS

Please read the user manual carefully before using the appliance. It provides important information on safety, installation, operation and maintenance. This will protect you and prevent damage to the appliance. An improper usage can cause personal injuries and damage to properties. Failing to follow these instructions shall void any warranty.

Keep the user manual for future reference. If the appliance is sold or passed on, make sure that the new owner always receives these safety instructions.

Intended Use

- This appliance is intended to be used in domestic household and similar household installation environments.
- This appliance is intended to wash textiles in household amounts suitable for domestic appliances.
- This appliance is intended for indoor usage only, not intended for outdoor, built in or commercial usage.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

NOTE

All other types of usage are not permitted. Manufacturer is not liable for damage caused by improper usage or incorrect operation.

Safety with Children

- Children under 3 years shall be kept away from the appliance or continuously supervised.
- Children should be supervised that they do not play with the appliance.
- Children from the age of 8 can use the appliance safely after they have been given appropriate supervision or instruction concerning use of appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- Children as well as pets may climb into the appliance. Check the appliance before every operation.
- Glass door may become very hot during washing. Keep children and pets far away from the appliance while it is operating.
- All washing detergents, fabric softener and cleaning agents are to be kept in a safe place out of the reach of children.

Explanation of Symbols



DANGER

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



WARNING OF ELECTRICAL VOLTAGE

This symbol indicates that there is a danger to life and health of persons due to voltage.



WARNING

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



CAUTION

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



NOTE

The signal word indicates important information (e.g. damage to property), but not danger.



OBSERVE INSTRUCTIONS

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Installation Location and Surrounding

- Do not install the appliance on a carpet floor. Because an obstruction of the openings by a carpet can damage the appliance.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance.
- Do not operate the appliance in rooms with a temperature of below 5°C. This can cause damages by frost to components, like hoses, which may burst or split. If it is unavoidable, make sure to drain the water completely from the appliance after every use. (see “Cleaning of drain pump”)
- Never use flammable sprays or substances in the immediate proximity of the appliance.
- This appliance is intended for use at altitudes of up to 4000m above sea level.
- Must not be installed in a non- stationary location like on a ship.

Installation

- Pay attention to the chapter “Product Installation”.
- Remove all packaging material and transport bolts before operating the appliance. Otherwise, serious damage may result.
- Before setting up the appliance, check it for any externally visible damage. Do not install or use a damaged appliance.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- After installation the appliance, it shall be calibrated. (see “Quick Start Guide”)
- Before washing laundry for the first time, the appliance shall be operated once a machine cleaning program. (see “Quick Start Guide”)
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.

Electrical Connection

- Connect the appliance to a grounded outlet socket protected by a fuse complying with the data in the “Technical specifications” table.
- If needed, the grounding installation has to be made by a qualified electrician. Ensure that the appliance is installed in accordance with the local regulations.
- Don´t use multiple plugs, extension cords or similar. Risk of overheating!
- The electrical socket must be easily accessible after installation so that the appliance can be disconnected from the electricity supply if needed.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Always pull at the plug, not at the cable.
- Do not pull the plug out of the mains outlet if there is flammable gas around. Risk of explosion!
- Make sure the supply cable is not trapped by the appliance, or it can get damaged.
- Always unplug the appliance if it is not being used.

WARNING: Electric Shock Hazard

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the appliance is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons. Never try to repair an appliance which is defective or presumed to defective.
- Never pour water over the appliance for cleaning purpose.
- Do not make any technical alterations to the appliance.
- Do not climb or sit on the appliance.
- Never pull out power plug with wet hands.

Water Connections

- The water inlet pressure should be between a maximum of 1 MPa (10bar) and a minimum of 0.05MPa (0.5 bar).
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- The water inlet and outlet hoses have to be securely installed and remain undamaged. Risk of water leakage!
- Check regularly the connections of the water inlet hose, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak, close the water tap and get it repaired.
- If you connect the drain hose to a sink, check that the water can drain quickly enough to prevent the sink from flooding. Make sure that the drain hose is properly secured so that it does not slip due to the force of the water flowing out.
- Close the tap if you are using the appliance for a longer period of time like on vacation, especially if there is no floor drain in the immediate proximity.

Operation

- Pay attention to the maximum load quantity of this appliance and the reduced load quantity of the single programs. The load quantity is expressed in kilogram dry laundry. (see "Program Settings")
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to appliance components, which can therefore cause damage to the laundry.
- Take care to remove lighters and matches before washing the laundry.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed manual in hot water with an extra amount of detergent before being washed in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be washed in the machine.
- Washing detergents, fabric softener or washing additives should be used and dosed as recommended in the instructions by manufacture.
- If you would like to descale the appliance, only use a proprietary natural citric acid based descaling agent.
- If the detergent gets into your eyes, rinse them thoroughly with lukewarm water immediately. If swallowed, consult a doctor immediately and present the packaging or label of the detergent.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the laundry are properly inserted and distributed.
- Take care when opening the door after using the steam function. Take a step back and wait until the steam has evaporated. Risk of scalding!
- Never try to open the door forcefully. The door will unlock shortly after the end of a program.

Maintenance

- Pay attention to the chapter “Cleaning and Maintenance”.
- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never use any flammable, explosive or toxic cleaning solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing. Risk of fire and explosion!
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of hot water can leak out. Risk of scalding!



CAUTION

Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Manufacturer will not be responsible for damages caused by the intervention of not authorized persons. Failing to follow these instructions shall void any warranty.

Transport

Before transporting the appliance prepare it to following instructions:


- Unplug the appliance and close the water inlet tap.
- Remove the water inlet and the drain hose from the house installations.
- Let the water drain completely from the appliance. (see “Cleaning the Drain Pump”)
- Important: Re-install the 4 transport bolts in the back of the appliance. (see “Remove Transport Bolts”).
- Check if the door and the detergent dispenser are closed properly.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.



CAUTION

Incorrect transportation can cause personal injuries and damage to properties. Ensure that the appliance is properly secured during transportation.

SPECIFICATIONS


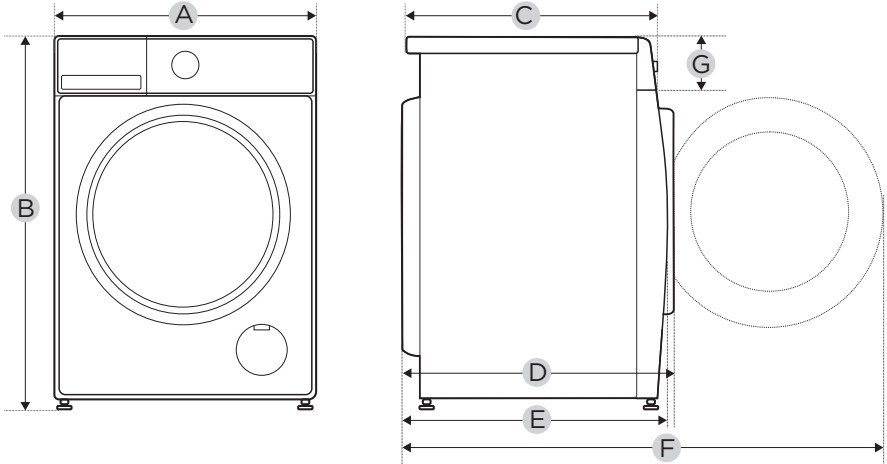


Model	CFE10W60A/W-IT
Power Supply	220-240V~,50Hz
MAX. Current	10A
Standard Water Pressure	0.05MPa-1MPa
Washing Capacity	6.0kg
Dimension	
A	595mm
B	850mm
C	400mm
D	465mm
E	421mm
F	912mm
G	152mm
Weight	57kg
Rated Power	1950W

NOTE

The washing capacity is the maximum load quantity in kg dry weight that can be washed at one time. Make sure that the laundry loaded into the appliance does not exceed the rated capacity.

PRODUCT OVERVIEW

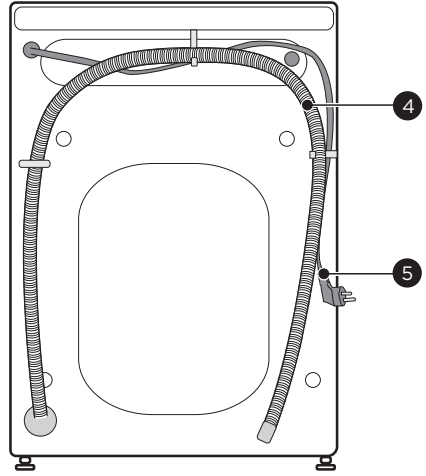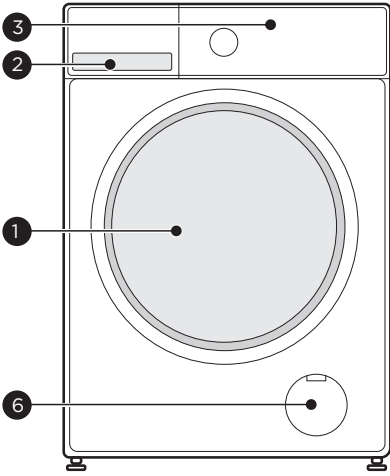






1	Door
2	Detergent dispenser
3	Control panel

4	Drain hose
5	Power supply cord
6	Service flap

NOTE

The illustration above is for reference only. Please take the appearance of the actual product as reference.

Accessories

4 x Cover caps	1 x Supply hose cold water	1 x User Manual	Acoustic sponge (optional)	Spanner (optional)
				

QUICK START GUIDE


WARNING

Before operation, please make sure the machine is installed properly. See chapter product installation.

Calibration of Appliances

The appliance is able to detect the amount of laundry loaded to optimize performance by minimizing energy and water consumption, saving you money and time. For this reason, it's recommended to calibrate the appliance for best use.

1. Remove all accessories from the drum and close the door.
2. Insert the mains plug to the socket.
3. Switch on the washing machine and press "Delay" and "Temp." simultaneously and continuously for 3 seconds until "t19" is displayed.

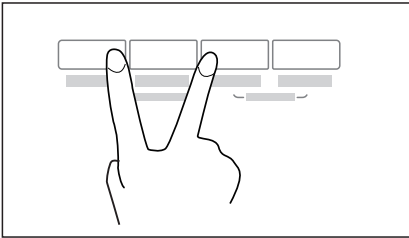


4. Start the calibration program by pressing Start/Pause.

Drum Clean


Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, clean the washing machine by running the "Drum Clean" program or "Cotton" program with the optional temperature of 90°C. Always run the Drum Clean program without laundry and add 1 table spoon of heavy-duty detergent.

1. Before Washing


1. Insert the mains plug

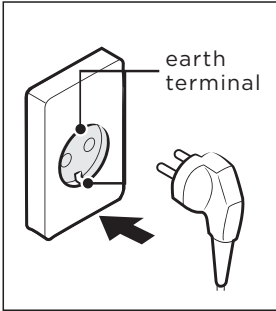


2. Open the water tap

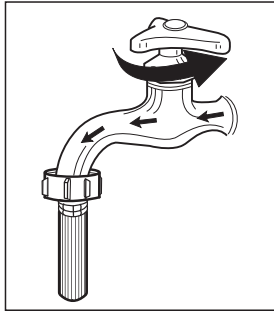


3. Load the laundry

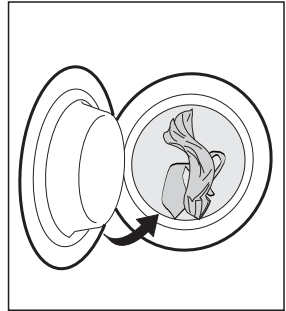

4. Close the door

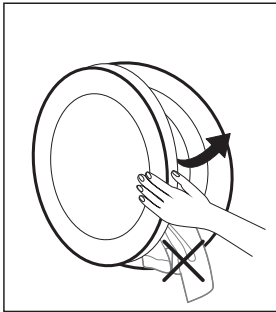

5. Add the detergents and washing aids

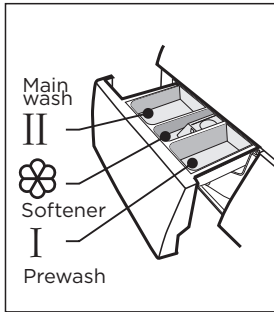


NOTE


- Detergent need to be added in compartment I if the prewash option is selected.
- When closing the door, please make sure that your clothing does not get caught between the sealing ring and the appliance door to prevent water from leaking during operation or damaging the sealing ring by pulling.

2. Washing


1. Select program

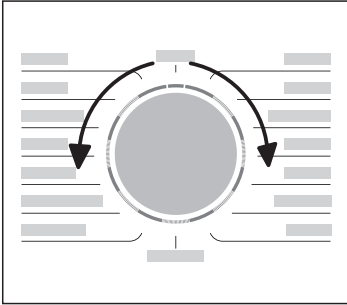

2. Select function or remain default settings

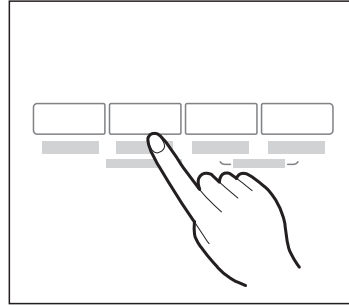

3. Press Start/Pause to start the program

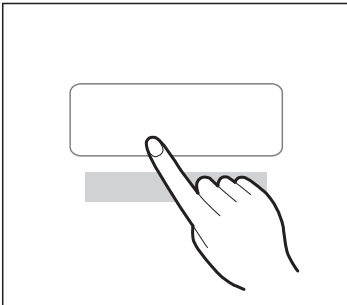

NOTE


The illustration above is for reference only. Please take the appearance of the actual product as reference.

3. After Washing

An acoustic signal is given and “End” will be displayed.

PRODUCT INSTALLATION

Tools Needed If Installation By Yourself

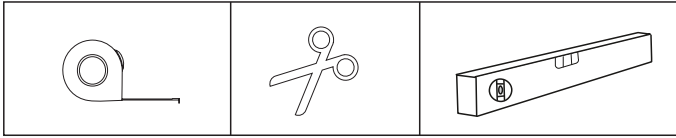

Tape measure



Scissors or Knife

Spirit level

Installation Area

WARNING


- Stability is important to prevent the product from moving!
- Make sure the washing machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.

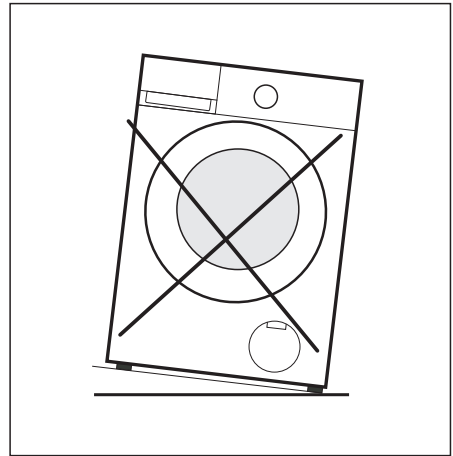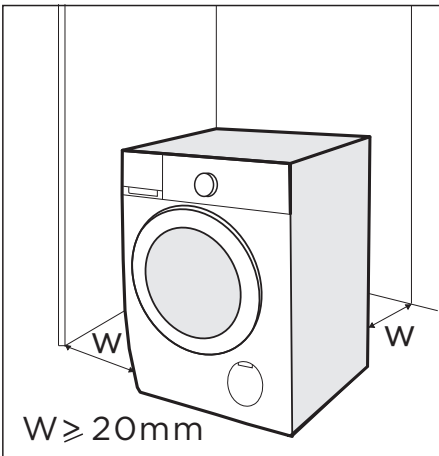

Before installing the washing machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface.
2. Avoid direct sunlight.
3. Sufficient ventilation.
4. Room temperature is above 5 °C .
5. Keep far away from the heat sources such as coal or gas burning appliances.

Unpacking the Washing Machine

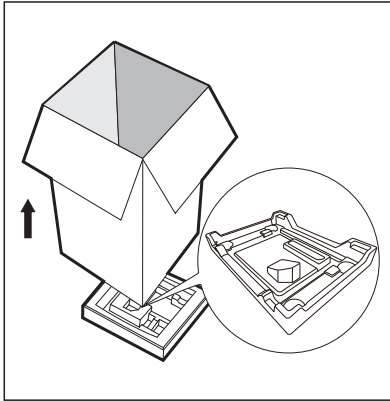

⚠ WARNING

- Packaging material (e.g. foils, styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.


1. Remove the cardboard box and styrofoam packing.
2. Lift the washing machine and remove the base packaging.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

Remove Transport Bolts


⚠ WARNING

You must remove the transport bolts from the backside before using the product.


1. Loosen the 4 transport bolts with a spanner.

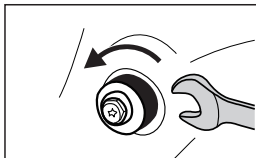

2. Remove the bolts including the rubber parts and keep them for future use.

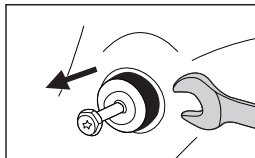


3. Close the holes by using the cover caps.

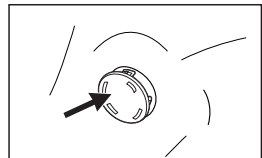

Levelling the Washing Machine

WARNING

The lock nuts on all four feet must be screwed tightly against the housing.

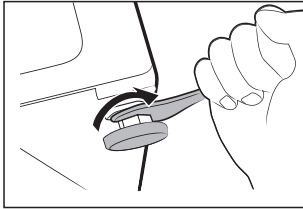


1. Loosen the lock nut.
2. Turn the feet until it reaches the floor.
3. Adjust the feet and lock the nuts with a spanner. Make sure the washing machine is level using a spirit level.

Connect the Water Supply Hose


WARNING

To prevent leakage or water damage, follow the instructions in this chapter.

- Do not kink, crush or modify water inlet hose.

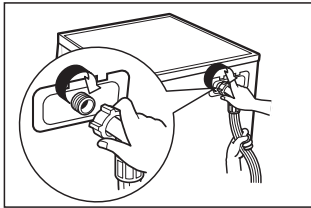

Connect the angled end of the water supply hose to the water inlet valve of the washing machine. Connect the other end of the water inlet hose to the cold water tap connection.

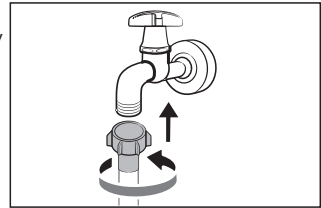

NOTE

- Tighten the connecting screw hand-tight. Check if the connections are tight.


Drain Hose

WARNING


- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result in water leakage.
- It is not allowed to remove the buckle of drain pipe.

There are two ways to place the end of drain hose:

1. Put it into the water trough.

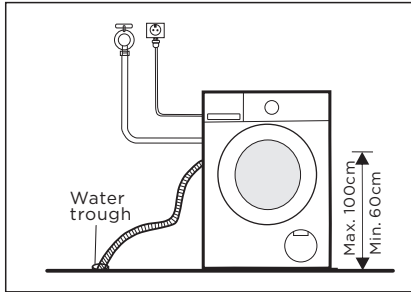


2. Connect it to the branch drain pipe of the trough.

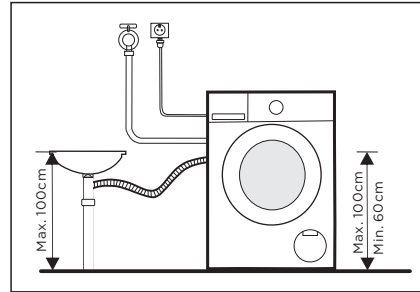

Acoustic Sponge

NOTE

- Please make sure to assemble the acoustic sponges, which can effectively reduce the noise caused by the machine while working, in order to provide you with a more peaceful and quiet living environment.

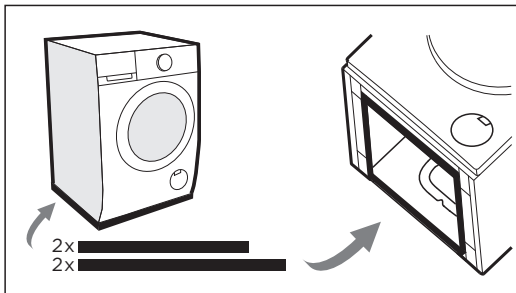


1. Get the machine laid on the floor, using some soft material like foam or clothes between the machine and floor for a protection;
2. Stick the 2x longer sponges to the longer bottom edges of machine, and the 2x shorter sponges to the shorter bottom edges.

OPERATION INSTRUCTIONS


Before Each Washing

- The ambient temperature of the washing machine should be between 5°C and 40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the appliance is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the dosing recommendation of the detergent manufacture before wash. Use non-foaming or less-foaming detergent suitable for washing machine properly.


1. Take all items out of the pockets

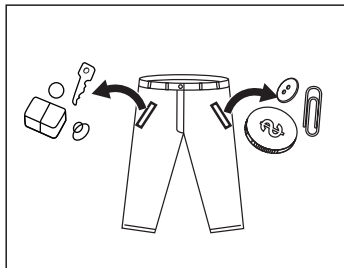


2. Sort laundry according to color and type of fabric

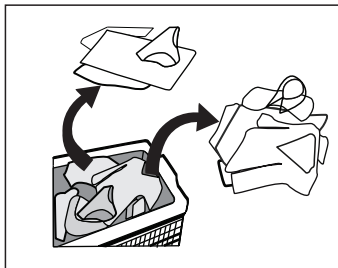

3. Tie together long textile strips and belts, close zips and button

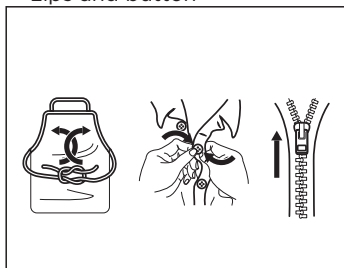

4. Put small items into a laundry bag

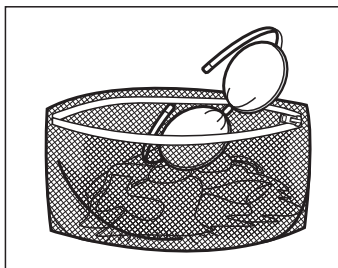


WARNING

- Do not wash textiles to which adhered any volatile or flammable substance such as cleaning agent, dry cleaning agent, spot remover, acetone, gasoline, kerosene, beauty oil, massage oil, animal oil, machinery oil, dry cleaning oil, volatile agent, alcohol, turpentine, wax, wax remover, banana water, disinfectant tablets, resin, etc.
- Washing single laundry items may easily create big imbalance. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.
- Do not wash and spin water-proof clothing or textiles.

Detergent Dispenser

- I Pre wash
- II Main wash
- ☼ Softener
- ⊖ Release button to pull out the dispenser

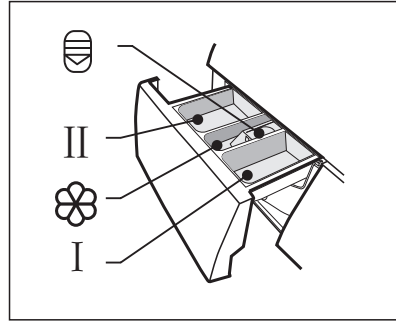

⚠ CAUTION

- Detergent need to be added in compartment PRE WASH if the prewash function is selected.
- If you use detergent pods or similar, place them directly in the washing machine drum.

Program	I	II / ⊖	☼	Program	I	II / ⊖	☼
Cotton	○	●	○	Quick 15'		●	○
Steam	○	●	○	Rapid 45'		●	○
Synthetic	○	●	○	Sport Wear	○	●	○
Mix	○	●	○	Wool		●	○
Jeans	○	●	○	Baby Care	○	●	○
ECO 40-60		●	○	Bulky/Bedlinen	○	●	○
20°C		●	○	Rinse & Spin			○
Spin Only				Drum Clean			

- Means must ○ Means optional

Detergent Recommendation

Recommended washing detergent	Type of laundry and textile	Program	Washing temp. °C
Heavy-duty detergent with bleaching agents or optical brighteners	Dye-resistant and heavy-duty cotton	Cotton, ECO 40-60	40/60/90
Colour detergent without bleaching agent but optical brighteners	Coloured laundry made from cotton or mixed fabric	Cotton	40/60
Color or mild detergent without optical brighteners	Coloured laundry made from easy care or synthetic fibres	Cotton, Synthetic	40
Mild washing detergent	Delicate textiles, silk, viscose	Sport Wear, Wool	40
Special wool detergent	Wool	Wool	40

NOTE

- Please choose the suitable type of detergent to receive best washing performance results and a minimum of water and energy consumption.
- To achieve the best cleaning result a proper detergent dosing is important.
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your articles of clothes are, less dirty articles of clothes require less detergent.
- Highly concentrated (compact detergent) requires particularly accurate dosing.


Following signs indicate an overdosing of detergent:

- heavy foam formation
- poor washing and rinsing result

Following signs indicate an underdosing of detergent:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

Control Panel

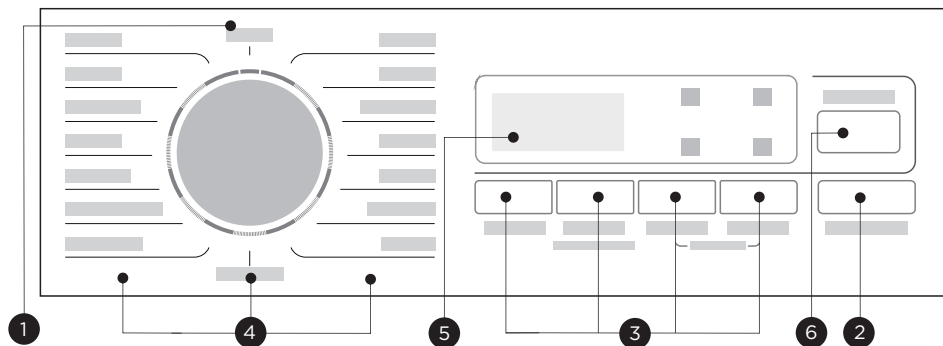

1 OFF

Turn the appliance off.

2 Start/Pause

Start or pause your program.

3 Option

This allows you to select additional functions.

4 Program

Choose appropriate program according to the laundry type.

5 Display

The display shows settings, estimated remaining time, options and status messages.


6 Drum Clean

Specially set in this machine to clean the drum and tube.

NOTE

- The illustration above is for reference only. Please take the appearance of the actual product as reference.

Display

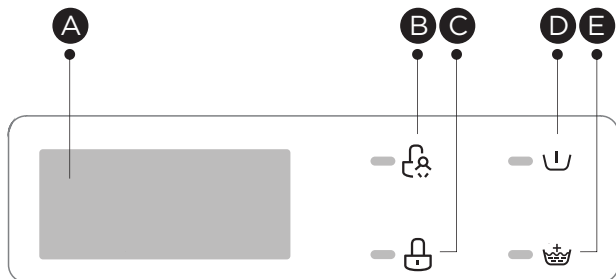

A Display

Wash Time
1:25
Speed
400
End
End

Delay Time
2H
Error
E30

B Child Lock

C Door Lock

D Pre Wash

E Extra Rinse

Program Settings

Program	Load(kg)	Display Time (h:min)
	6.0	6.0
Cotton	6.0	3:39
Steam	3.0	1:48
Synthetic	3.0	3:18
Mix	6.0	1:20
Jeans	6.0	1:45
ECO 40-60	6.0	3:18
20°C	3.0	1:01
Spin Only	6.0	0:12
Rinse & Spin	6.0	0:20
Bulky/Bedlinen	3.0	1:48
Baby Care	6.0	1:42
Wool	2.0	0:59
Sport Wear	3.0	0:47
Rapid 45'	2.0	0:45
Quick 15'	2.0	0:15
Drum Clean	--	1:18

NOTE

- Loading the household washing machine up to the load quantity indicated for the respective programs will contribute to energy and water savings.
- The rated capacity is the maximum load quantity in kg dry weight that can be washed at one time. Make sure that the laundry loaded into the appliance does not exceed the rated capacity.

Consumption Data

The listed consumption data are measured in accordance with EN 60456. The actual consumption data may vary from the given data. The load quantity, type of fabric, composition of the laundry, selected level of soiling and options as well as ambient conditions can influence the consumption data.

CFE10W60A/W-IT							
Consumption per program	Nominal Load Capacity [kg]	Temperature [°C]	Program duration [hh:mm]	Energy Consumption [kWh]	Water Consumption [L]	Highest temperature [°C] ¹⁾	Residual Moisture [%] / Spin Speed [rpm] ²⁾
Cotton	6.0	60	3:44	1.287	58	60	60%/1200
20°C	3.0	20	1:01	0.171	37	20	65%/1000
Mix	6.0	40	1:20	0.637	58	40	65%/1000
Baby Care	6.0	60	1:42	1.074	58	60	65%/1000
Quick 15'	2.0	Cold	0:15	0.030	31	Cold	70%/800
ECO 40-60 ³⁾	6.0	--	3:18	0.546	50.0	34	62.9%/1200
	3.0	--	2:36	0.315	42.0	28	62.9%/1200
	1.5	--	2:36	0.150	31.0	24	62.9%/1200

- 1: The highest temperature in degrees Celcius that the laundry reaches for at least 5 minutes during the program.
- 2: The residual moisture of the laundry in percent reached at the end of the program at the specified spin speed
- 3: The ECO 40-60 program is the energy saving program and is suitable for washing normally soiled cotton laundry. It's the most efficient program in terms of energy consumption for cotton laundry. It's used to assess the compliance with the Delegated Regulation of the EU Commission 2019/2023 Ecodesign and 2019/2014 Energy Labeling, measured in accordance with EN 60456.

 **NOTE**

The most efficient programs in terms of energy consumption are generally those that perform at lower temperatures and longer program duration.

Loading the household washing machine to the maximum loading quantity of the respective program can save energy and water.

The noise level and the residual moisture content of the laundry are influenced by the spin speed during the final spin: the higher the spin speed at final spin, the lower the residual moisture content of the laundry, but the higher the noise level.



CAUTION

- If there is any interruption of the power supply while the appliance is operating, a special memory stores the selected program. The appliance will continue the program when the power supply is re-established.

Program Description





















The chart describes the characteristics of the individual programs.

  Programs

  Cotton	This program is suitable for washing heavy-duty cotton items. Note: Use Mix program to wash mixed loads type made of cotton and synthetics.
Steam	High-temperature steam is used for wrinkle removal and care of garments, suitable for cotton, linen, synthetic fibers, and mixed fabrics.
Synthetic	Suitable for easy-care textiles made of synthetic or mixed fabric, such as trousers, T-shirts, pullovers and socks. Note: Reduce the spin speed for crease sensitive textiles. Do not exceed the maximum loading quantity.
Mix	For washing mixed loads made of cotton, synthetic including mixed fabric.
Jeans	Specially for jeans.
ECO 40-60	Able to clean normally soiled cotton laundry. For loads that can be washed at 40 °C or 60 °C in the same program. Energy saving washing program.
20°C	Able to clean lightly soiled cotton laundry at a nominal temperature of 20 °C. Note: Do not exceed the maximum loading quantity.
Spin Only	Spins and drains the water.
Rinse&Spin	For barely worn and new garments that need to be rinsed. Note: You can use fabric softener to freshen up your garments.
Bulky/Bedlinen	This program is specially designed for washing Bulky/Bedlinen.
Baby Care	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
Wool	Gentle wash program to prevent shrinkage for machine-washable wool or wool blend fabrics. Note: Reduce the spin speed for very delicate woolen garments.
Sport Wear	Washing the activewear.
Rapid 45'	A short wash program, which is suitable for lightly soiled garments and small quantities of laundry. Please note that quick wash programs generally have an increased energy and water consumption.
Quick 15'	An extra short program for barely worn and new garments that need to be rinsed. Note: You can use fabric softener to freshen up your garments.
Drum Clean	Special cleaning program for your washing machine to remove dirt and limescale deposits. Clean your washing machine regularly to keep laundry washing sustainable. Note: Always run the Drum Clean program without laundry and add 1 table spoon of heavy-duty detergent.

  Option

The charts shows which program offers which option for adjustment.

    Program	Default Temperature(°C)	Default spin speed(rpm)	Additional Options
		12-	
Cotton	40	12-	Delay,  , 
Steam	40	10-	Delay,  , 
Synthetic	40	12-	Delay,  , 
Mix	40	10-	Delay,  , 
Jeans	60	10-	Delay,  , 
ECO 40-60	--	--	Delay
20°C	20	10-	Delay, 
Spin Only	--	10-	Delay
Rinse & Spin	--	10-	Delay, 
Bulky/Bedlinen	40	10-	Delay,  , 
Baby Care	60	10-	Delay,  , 
Wool	Cold	600	Delay, 
Sport Wear	20	800	Delay,  , 
Rapid 45'	20	800	Delay, 
Quick 15'	Cold	800	Delay
Drum Clean	90	--	Delay

NOTE

In "Default spin speed" 12-, and 10- mean speeds of 1200, and 1000.

Speed

Speed

If needed, the spin speed can be adjusted in the following steps by pressing the button: 0-400-600-800-1000-1200.

Delay

Delay

This function is used to set a time-delayed of the wash program.

1. Select a program.
2. Press the delayed button and select a time between 0 and 24 hours.
3. Press [Start/Pause] to start the time-delayed program.



Choose program

Setting time

Start

To cancel the delayed function, press the “Delay” button again before starting the program until the display shows 0 hours.

Pre Wash

Pre Wash

For pre-treatment of heavily soiled textiles with adhering dirt such as soil, dust or sand.

Remark:

The detergent must be dispensed into the compartment PRE WASH.

Use one third of the detergent for the pre-wash phase and two thirds for the main wash phase.

Extra Rinse

Extra Rinse

The laundry will undergo an extra rinse after selecting this function.

Temp.

Temperature

If needed, the washing temperature can be adjusted in the following steps by pressing the button:

Cold - 20°C - 40°C - 60°C - 90°C.

Drum Clean

Drum Clean

After the machine runs to the set counting period(counting cycle is 25 times), Drum Clean lamp flashes at the end of the last program, reminding the user to run the program by:

- 1.Remove the clothes and close the door.
- 2.Press [Drum Clean].
- 3.Press [Start/Pause].

Number of washing cycles will be recounted when drum clean program is finished.

Skip the reminder:

1.Press and hold the Drum Clean button for 3s, Drum cleaner indicator reminder will be cancelled and washing cycles will be recounted for another 25 cycles.

Function

Function

 
Press [Function] to select “Pre Wash” and “Extra Rinse”.



Child Lock

The child lock is intended to prevent children from using the controls inappropriately.

This setting deactivates the function of all buttons with the exception of the OFF function.



Press [Temp.] and [Function] simultaneously for 3 seconds until the buzzer beep. The child lock is now activated.

The child lock can only be deactivated again by pressing the two buttons simultaneously again!

CAUTION

When the Child Lock is activated, the display will alternately show “CL” and the remaining time.

Pressing any other button will cause the Child Lock indicator to flash. When the program ends, “CL” and “End” will alternate on the display.


 


Mute the buzzer



Choose the Program



 |  Press 3 sec.

Press [Speed] simultaneously for 3 seconds, until the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.

CAUTION

- After Muting the buzzer function, the sounds will not be activated any more.

NOTE

Usage counter

1. Unplug the equipment for 10s and reconnect again.
2. Power on and within 10s, please press "Delay" and "Drum Clean" on control panel simultaneously and continuously for around 5s until the device display shows digits--the value can indicate the times of equipment usage.
3. Repeat step 1 again and customer can resume to normal operation.

Product Fiche

Supplier's name or trade mark^(*)(^(*)):

Supplier's address^(*)(^(*)):

Model identifier^(*):CFE10W60A/W-IT

General product parameters:

Parameter	Value	Parameter	Value	
Rated capacity ^(b) (kg)	6.0	Dimensions in cm ^(b) (^(*))	Height	85
			Width	60
			Depth	40
Energy efficiency index ^(b) (EEI _w)	46.8	Energy efficiency class ^(b)	A (^(d))	
Washing efficiency index ^(b)	1.031	Rinsing effectiveness (g/kg) ^(b)	5.0	
Energy consumption in kWh per cycle, based on the eco 40-60 programme at a combination of full and partial loads. Actual energy consumption will depend on how the appliance is used.	0.379	Water consumption in litre per cycle, based on the eco 40-60 programme at a combination of full and partial loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water.	43	
Maximum temperature inside the treated textile ^(b) (°C)	Rated capacity	34	Weighted remaining moisture content ^(b) (%)	62.9
	Half	28		
	Quarter	24		
Spin speed ^(b) (rpm)	Rated capacity	1200	Spin-drying efficiency class ^(b)	C (^(d))
	Half	1200		
	Quarter	1200		
Programme duration ^(b) (h:min)	Rated capacity	3:18	Type	free-standing
	Half	2:36		
	Quarter	2:36		
Airborne acoustical noise emissions in the spinning phase ^(b) (dB(A) re 1 pW)	76	Airborne acoustical noise emission class ^(b) (spinning phase)	B (^(d))	
Off-mode (W) (if applicable)	0.50	Standby mode (W)(if applicable)	0.50	
Delay start (W) (if applicable)	4.00	Networked standby (W)(if applicable)	N/A	

Minimum duration of the guarantee offered by the supplier ^(*)(^(*)):

This product has been designed to release silver ions during the washing cycle

NO

Additional information:

Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU)2019/2023^(*) is found:

^(*) this item shall not be considered relevant for the purposes of Article 2(6) of Regulation (EU) 2017/1369, for the eco 40-60 programme.

^(*) changes to this item shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU)2017/1369.

^(*) if the product database automatically generates the definitive content of this cell, the supplier shall not enter these data.

- 1) The actual energy consumption will depend on how the appliance is used.
- 2) The actual water consumption will depend on how the appliance is used and on the hardness of the water.
- 3) Delivery of the spare parts within 15 working days after having received the order.

Product Data Sheet concerning (EU) 2019/2014

The product data sheet for your appliance can be found online.

Go to <https://eprel.ec.europa.eu> and enter the model identifier for your appliance to download the data sheet.

The model identifier for your appliance can be found in the technical specifications section.

CLEANING AND MAINTENANCE

Cleaning and Care

Clean your washing machine regularly to keep laundry washing sustainably. The cleaning recommendation is described in the corresponding chapter.

WARNING

- Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

Proper maintenance of the appliance can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a towel to wipe it off immediately. Never use sharp items to clean the appliance. It's recommended to clean the cabinet as needed.



CAUTION

- Never use abrasive or caustic agents. Such as formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

Cleaning the Drum


Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

NOTE

- Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass


Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages. Remove any coins, buttons and other objects from the seal after each wash. Clean the door seal and glass every month to ensure the normal operation of the appliance.

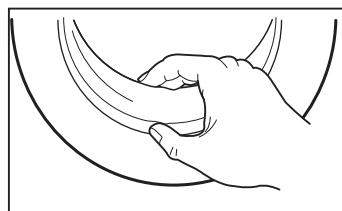


Cleaning the Inlet Filter

Clean the filter as needed. A diminishing water flow is a sign that the filter may be blocked.


1. Close the tap and remove the water supply hose from it.

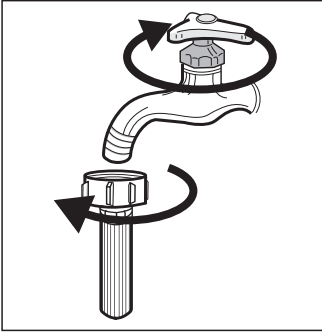


2. Clean the filter with a brush.

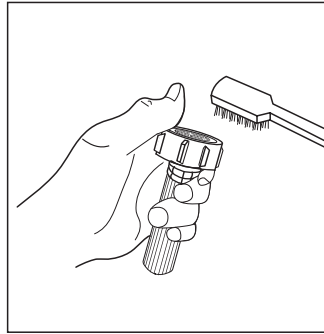

3. Unscrew the water supply hose from the backside of the appliance.

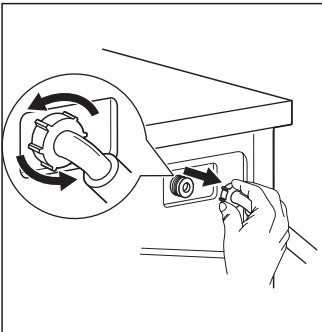

4. Clean the filter with a brush.

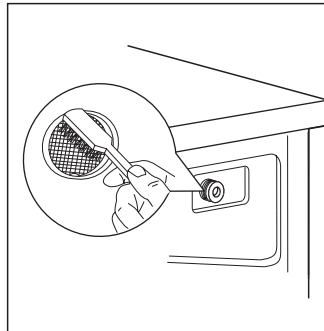


5. Reconnect the water supply hose again.


6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

Cleaning the Detergent Dispenser


Limescale and detergent residues can build up on the detergent dispenser. It's therefore recommended to clean the detergent dispenser if needed.

- Press down the release [] on the softener cover and pull the detergent dispenser out of the detergent box.
- Lift the softener cover off the detergent dispenser and wash both items with water.
- Clean the inside of the detergent box with a brush.
- Restore the softener cover and push the dispenser back into the detergent box.


1. Press the release and remove the detergent dispenser

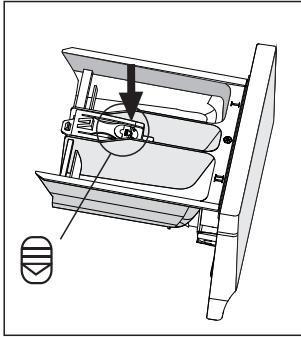


2. Clean the detergent dispenser and the softener cover under water

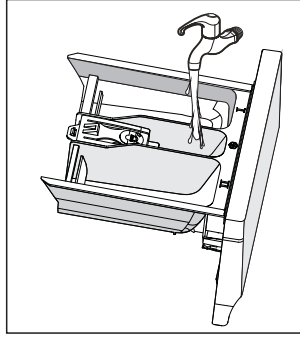

3. Clean the detergent box with a soft brush

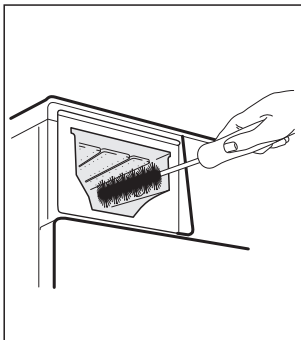

4. Insert the detergent dispenser

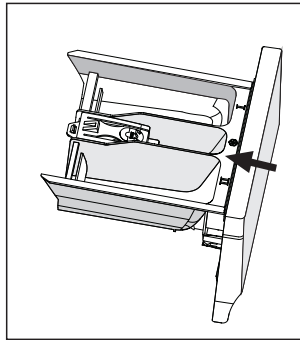

NOTE

- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.
- Always leave the detergent dispenser slightly open so that it can dry properly.


Cleaning the Drain Pump Filter

If there is a problem with the drain pump, clean it according to the following cleaning instructions.


WARNING

- Make sure that the washing machine has finished the washing program and load is removed of drum. Switch it off and unplug the washing machine before cleaning the drain pump filter.
- Be careful of hot water. Wait for water cooling down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.


1. Open the lower cover cap

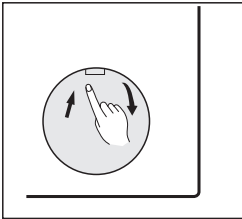


2. Open the filter by turning to the counter clockwise

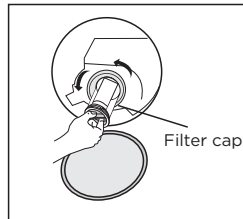

3. Remove extraneous matter

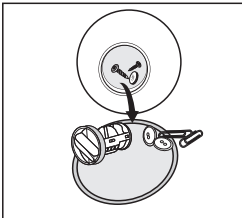

4. Close the lower cover cap

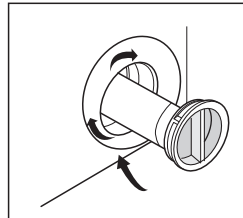

NOTE

- Make sure that hose cap of emergency drain hose are reinstalled properly, otherwise water may leak.
- When the washing machine is under operation and depending on the program selected there can be hot water in the pump. Never remove the pump cover during a washing program, always wait until the washing machine has ended the operation and load is removed of drum.

TROUBLE SHOOTING

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible Cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Check the laundry. Close the door properly and restart.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet hose. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts are still in place. Floor is not solid or level.	Check if the fixing bolts have been removed. Make sure the appliance is installed on a solid and level floor. Leveling the appliance again.

Error Codes


Description	Possible Cause	Solution
E30	Door is not closed properly.	Close the door properly and restart.
E10	Water injecting problem during washing program.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose and pump filter for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the customer service.

DISPOSAL AND RECYCLING

Important Instructions for Environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

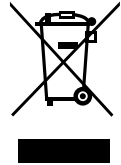

Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



Customer Service

Spare parts for your appliance are available for a minimum of 10 years following EU COMMISSION REGULATION 2019/2023 ANNEX II Ecodesign requirements.

In case of questions, please contact our local customer service center.

WARNING

Risk of electric shock

- Never try to repair an appliance which is defective or presumed to be defective. You may put your own and future users' lives in danger. Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recognized!

Transport

IMPORTANT STEPS WHEN MOVING THE APPLIANCE

- Unplug the appliance and close the water inlet tap.
- Check if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Cleaning the Drain Pump Filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.

Midea Italia S.r.l. a socio unico
viale Luigi Bodio 29/37
20158 Milano, Italy

Comfee'

...is how I feel!

Made in P.R.C

www.feelcomfee.com