comfee'

Dishwasher

!nstructionManual

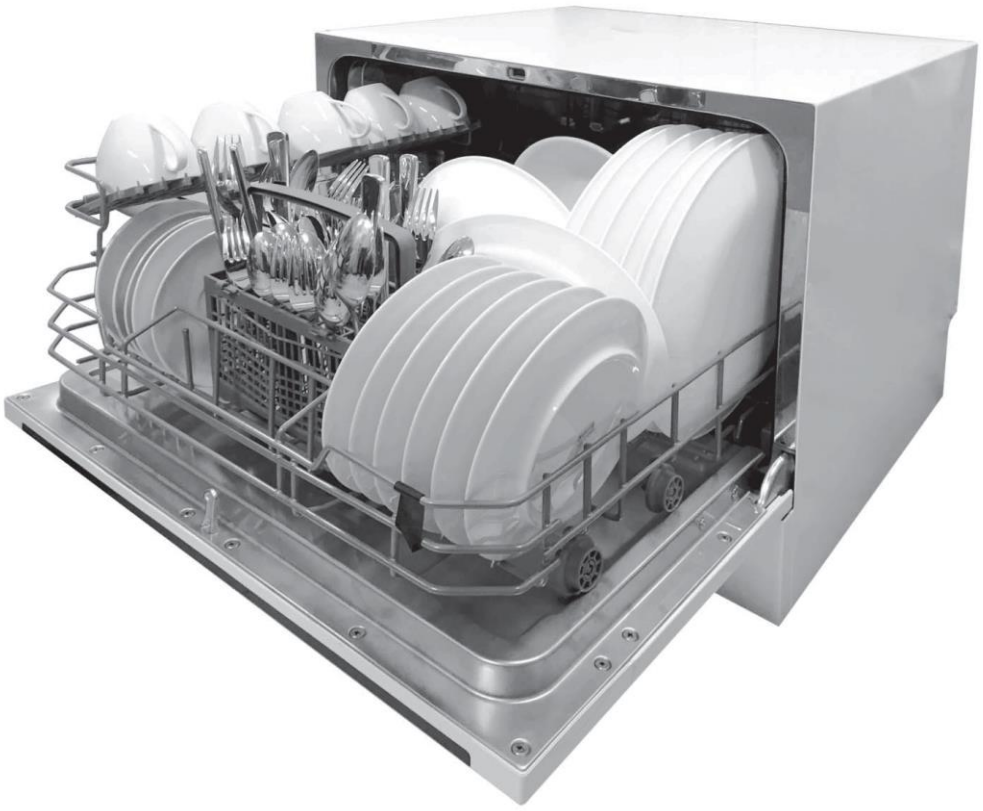

Free 3 months extension of the original limited warranty period!* Simply text a picture of your proof of purchase to:

1-844-224-1614

*The warranty extension is for the three months immediately following the completion of the product's original warranty period.

Models:
CDC22P2AWW
CDC22P1ABB

Read this Manual

Dear Customer,

- Please carefully read this manual before using the dishwasher This will help you use and maintain the dishwasher properly
- Keep it to refer to at a later date
- Pass it on to any subsequent owner of the appliance

This manual contains sections of Safety !nstructions Operating !nstructions !nstallation !nstructions and Troubleshooting Tips etc

Before Calling for Service

- Review the Troubleshooting Tips section to solve some common problems by yourself
- !f you can not resolve the troubles by yourself please ask for the help of professional technicians

NOTE:

The manufacturer following a policy of constant development and updating of the product may make modifications without giving prior notice

1) Safety Information.....1

2) Operating Instructions.....3
Control Panel 3
Dishwasher Features 3

3) Before First Use.....3
A Fill the Rinse Aid Dispenser 3
B Function of Detergent

4) Loa ing t!e "is!#as!er Bas$et.....%
Attention before or after loading the Dishwasher Baskets 6
Loading the Basket 7
Cutlery Basket 8

&) Starting a 'as!ing (rogram.....)
Wash Cycle Table 9
Turning on the Appliance 9
Change the Programme 10
At the End of the Wash Cycle 10

%) *aintenance an +,eaning 11
Filtering System 11
Caring for the Dishwasher 12

-) Insta,,ation Instruction 13
Positioning the Appliance 1
About Power Connection 1
Water Connection 15
Start of dishwasher 15

.) /rou0,es!ooting /ips 1-
Before calling for service 17
Error codes 18
Technical information 19

9) Warranty 20

1 !MPORTANT SAFETY !NFORMAT!ON READ ALL !NSTRUCT!ONS BEFORE US!NG

⚠ **WARN!NG!** When using your dishwasher follow the precautions listed below:

GROUND!NG !NSTRUCT!ONS

- This appliance must be grounded !n the event of a malfunction or breakdown grounding will reduce the risk of electric shock by providing a path of least resistance of electric current This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug
- The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances

⚠WARN!NG!

- !mproper connection of the equipment-grounding conductor can result in a risk of electric shock
- Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded Do not modify the plug provided with the appliance; !f it is not fit for the outlet Have a proper outlet installed by a qualified electrician

WARN!NG! PROPER USE

- Do not abuse sit on or stand on the door or dish rack of the dishwasher
- Do not touch the heating element during or immediately after use
  (This instruction is only applicable to machines with a visual heating element)
- Do not operate your dishwasher unless all enclosure panels are properly in place Open the door very carefully if the dishwasher is operating there is a risk of water squirting out
- Do not place any heavy objects of stand on the door when it is open The appliance could tip forward
- When loading items to be washed:
  1) Locate sharp items so that they are not likely to damage the door seal;
  2) Warning: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position
- When using your dishwasher you should prevent plastic items from coming into contact with heating element (This instruction is only applicable to machines with a visual heating element)
- Check that the detergent receptible is empty after completion of the wash cycle
- Do not wash plastic items unless they are marked dishwasher safe or the equivalent For plastic items not so marked check the manufacturer's recommendations
- Use only detergent and rinse additives designed for an automatic dishwasher
- Never use soap laundry detergent or hand washing detergent in your dishwasher Keep these products out of the reach of children
- Keep children away from detergent and rinse aid keep children away from the open door of the dishwasher there could still be some detergent left inside
- This appliance is not intended for use by persons (including children)with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance
- Dishwasher detergents are strongly alkaline they can be extremely dangerous if swallowed Avoid contact with skin and eyes and keep children away from the dishwasher when the door is open
- The door should not be left in the open position since this could present a tripping hazards
- !f the supply cord is damaged it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
- Remove the door to the washing compartment when removing an old dishwasher from service or discarding it
- Please dispose of packing materials properly
- Use the dishwasher only for its intended function
- During installation the power supply must not be excessively or dangerously bent or flattened Do not tamper with controls
- The appliance is to be connected to the water mains using new hose sets and that old hose-sets should not be reused
- The maximum number of place settings to be washed is 6
- The maximum permissible inlet water pressure is 1Mpa
- The minimum permissible inlet water pressure is 0 0 Mpa

⚠Attention:

The installation of the pipes

and electrical equipments

should be done by professionals

READ AND FOLLOW TH!S SAFETY !NFORMAT!ON CAREFULLY SAVE THESE !NSTRUCT!ONS

2 Operation !Instruction

!IMPORTANT *To get the best performance from your dishwasher, read all operating instructions before using it for the first time.*

Control Panel

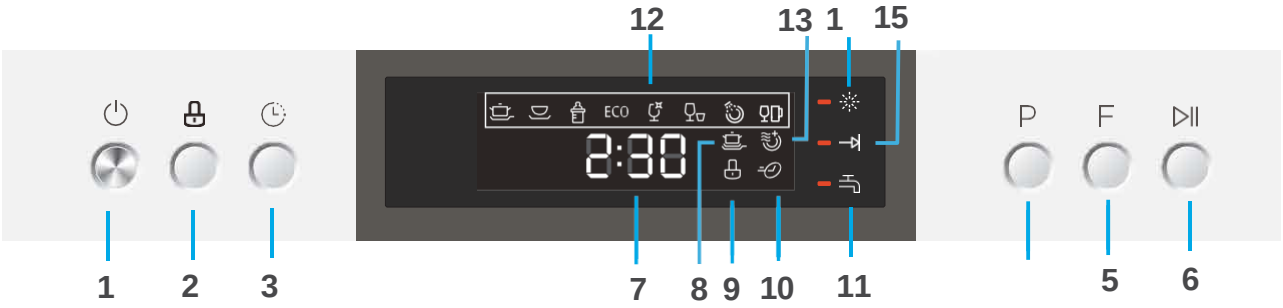

1 Power Button: To turn on/off the power supply

2 Child lock function: Press Child button to lock the program;

3 Delay Button : To press the button to delay

Program Selector: Press the button to select wash cycles

5 F unction Selector: To select Extra drying Extra cleaning or Express

6 Start/Pause Button: Press this button to start or pause the dishwasher

7 Display Screen:To show remaining time and the state(running state delay time etc)

8 Extra Cleaning !ndicator;

9 Child Lock !ndicator;

10 Express !ndicator;

11 Water Faucet !ndicator;

12 Program !ndicator Light

13 Extra Drying !ndicators: To show Extra drying function

1 Rinse Aid Warning Light : To be on when the rinse aid dispenser needs to be refilled

15 Program Ending !ndicator

Dishwasher Features

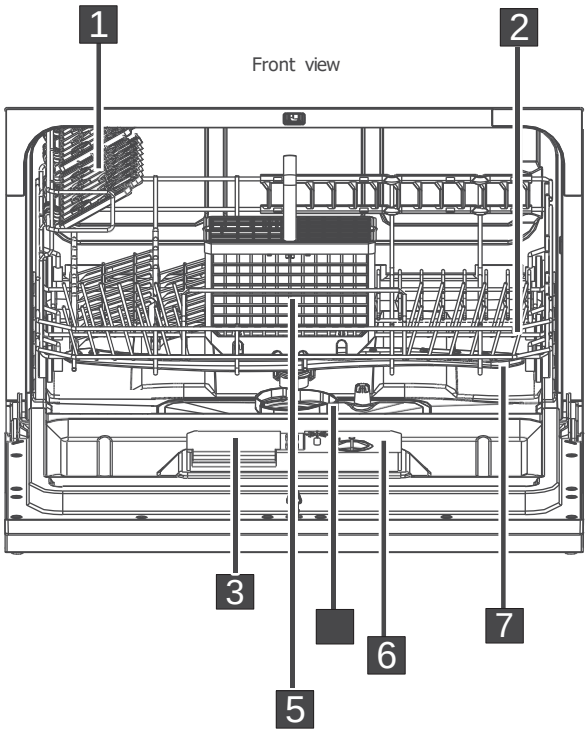

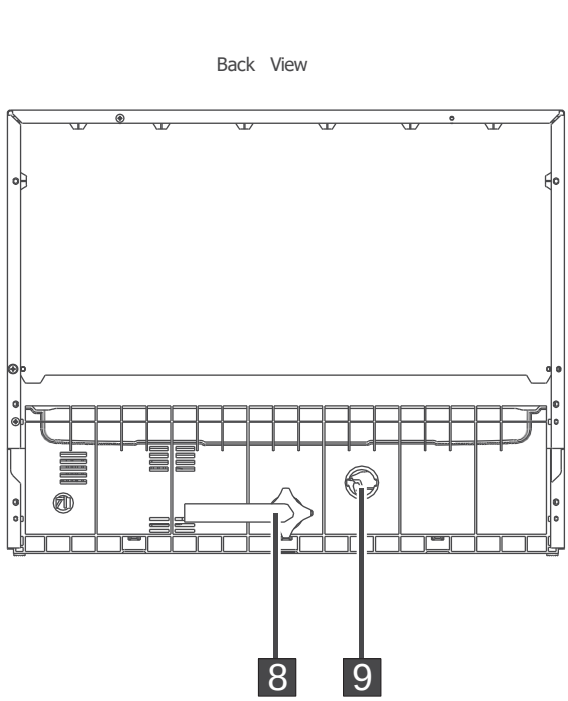

Cup Shelf

Basket

3 Detergent Dispenser

Filter Assembly

Cutlery Basket

Rinse Aid Dispenser

Spray Arms

!nlet Pipe Connector

9 Drain Pipe Connector

A Fill the Rinse Aid Dispenser

Rinse Aid Dispenser

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes That can leave spots and streaks !t also improves drying by allowing water to slide off the dishes Your dishwasher is designed to use liquid rinse aids The rinse aid dispenser is located inside the door next to the detergent dispenser To fill the dispenser open the cap and pour the rinse aid into the dispenser until the level indicator turns completely black The volume of the rinse aid container is about 110ml

Function of Rinse Aid

Rinse aid is automatically added during the last rinse ensuring thorough rinsing and spot and streak free drying

Attention!

Only use branded rinse aid for dishwasher Never fill the rinse aid dispenser with any other substances (e g Dishwasher cleaning agent liquid detergent) This would damage the appliance

When to Refill the Rinse Aid Dispenser

!f there is no rinse-aid warning light in the control panel you can judge the amount of rinse-aid by the color of the optical level indicator **"C "**located next to the cap When the rinse-aid container is full the whole indicator will be dark As the rinse-aid diminishes the size of the dark dot decreases You should never let the rinse aid get below 1 / full

C (Rinse-Aid indicator)

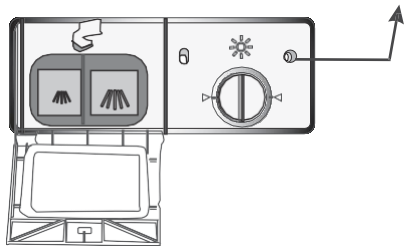

As the rinse aid diminishes the size of the black dot on the rinse aid level indicator changes as illustrated below

- ● Full
- ◉ 3 / full
- ◉ 1 / 2 full
- ⊙ 1 / full - Should refill to eliminate spotting
- ○ Empty

1

2

3

1 To open the dispenser turn the cap to the "open" (left) arrow and lift it out

2 Pour the rinse aid into the dispenser being careful not to overfill

3 Replace the cap by inserting it aligned with "open" arrow and turning it to the closed (right) arrow

NOTE: *Clean up any rinse aid spilled during filling with an absorbent cloth to avoid excessive foaming during the next wash.* Don't forget to replace the cap before you close dishwasher door

1 2usting 3inse 1 i "ispenser

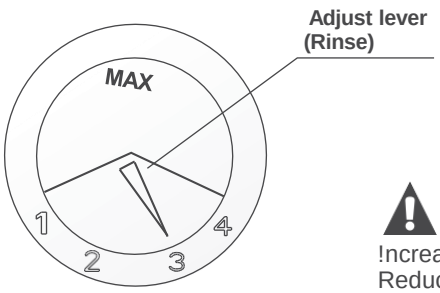

The rinse aid dispenser has four settings The recommended setting is on "3"
!f the dishes still are not drying properly or are spotted adjust the dial to the next higher number on " "

NOTE

!ncrease the dose if there are drops of water or lime spots on the dishes after washing
Reduce it if there are sticky whitish stains on your dishes or a bluish film on glassware or knife blades

B Function of Detergent

Proper Use of Detergent

Detergents with its chemical ingredients are necessary to remove dirt crush dirt and transport it out of the dishwasher
Use only detergent specifically made for use in dishwashers Keep your detergent fresh and dry
Don't put powder detergent into the dispenser until you're ready to wash dishes

Detergents

There are 3 sorts of detergents

1 With phosphate and with chlorine
2 With phosphate and without chlorine
3 Without phosphate and without chloride

Normally new pulverised detergent is without phosphate The water softener function of phosphate is not given !n this case we recommend to fill salt in the salt container even when the hardness of water is only 6 °dH !f detergents without phosphate were used in case of hard water often white spots appear at dishes and glasses !n this case please add more detergent to reach better results Detergents without chlorine do only bleach a little Strong and coloured spots will not removed completely !n this case please choose a program with higher Temperature

Concentrated Detergent

Based on their chemical composition dishwashers can be split in two basic types:

- conventional alkaline detergents with caustic components
- low alkaline concentrated detergents with natural enzymes

The use of "normal" washing program in conjunction with concentrated detergents reduces pollution and is good for your dishes; these wash programs are specially matched to the dirt-dissolving properties of the enzymes of the concentrated detergent For this reason "normal"wash program in which concentrated detergents are used can achieve the same results that can otherwise only be achieved using "heavy" program

Detergent Tablets

Detergent tablets of different brands dissolve at different speeds For this reason some detergent tablets cannot dissolve and develop their full cleaning power during short program Therefore please use long program when using detergent tablets to ensure the complete removal of detergent residuals

Detergent Dispenser

The dispenser must be refilled before the start of each wash cycle following the instructions provided in the Wash Cycle Table Your dishwasher uses less detergent and rinse aid then conventional dishwasher Generally only one tablespoon of detergent is needed for a normal wash load Also more heavily soiled items need more detergent Always add the detergent just before starting the dishwasher otherwise it could get damp and will not dissolve properly

Amount of Detergent to Use

1

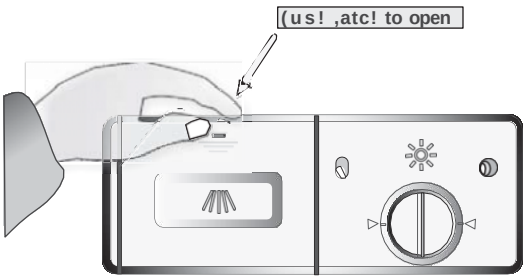

2

Detergent powder

Detergent tablet

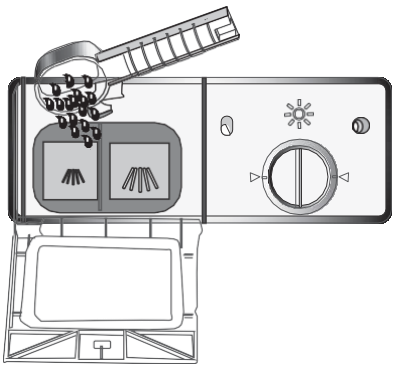

NOTE

- !f the lid is closed: press release button The lid springs open
- Always add the detergent just before starting each wash cycle
- Only use branded detergent aid for dishwasher

WARN!NG! Dishwasher detergent is corrosive! Take care to keep it out of reach of children

Fill in detergent

Fill the detergent dispenser with detergent The marking indicates the dosing levels as illustrated on right:

A Capacity-15g

B Capacity-25g

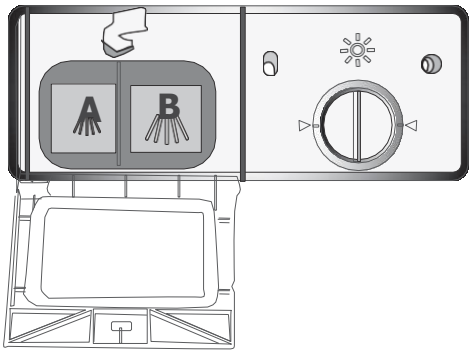

Please observe the manufacturers dosing and storage Recommendations as stated on the detergent packaging

Close the lid and press until it locks in place

!f the dishes are heavily soiled place an additional detergent dose in the pre-wash detergent chamber This detergent will take effect during the pre-wash phase

NOTE

- You find information about the amount of detergent for the single programme on the last page
- Please aware that according to the level soiling and the specific hardness of water differences are possible
- Please observe the manufacturer's recommendations on the detergent packaging

Loading the Dishwasher Baskets

Recommendation

- Consider buying utensils which are identified as dishwasher-proof
- Use a mild detergent that is described as specially for dishware !f necessary seek further information from detergent manufacturers
- For particular items like glassware select a program with as a low temperature
- To prevent damage do not take glass and cutlery out of the dishwasher immediately after the program has ended

!tems Not Recommended For The Dishwasher

Are not suitable

- Cutlery with wooden horn china or mother-of-pearl handles
- Plastic items that are not heat resistant
- Older cutlery with glued parts that is not temperature resistant
- Bonded cutlery items or dishes
- Pewter or cooper items
- crystal glass
- Steel items subject to rusting
- Wooden platters
- !tems made from synthetic fibres

Are of limited suitability

- Some types of glasses can become dull after a large number of washes
- Silver and aluminium parts have a tendency to discolour during washing
- Glazed patterns may fade if machine washed frequently

Attention Before or After Loading The Dishwasher Baskets

(For best performance of the dishwasher follow these loading guidelines
Features and appearance of baskets and cutlery baskets may vary from your model)

Scrape off any large amounts of leftover food Soften remnants of burnt food in pans
!t is not necessary to rinse the dishes under running water
Place objects in the dishwasher in following way:

1 !tems such as cups glasses pots/pans etc are face down
2 Curved items or those with recesses should be loaded at a slant so that water can run off
3 All utensils are stacked securely and can not tip over
All utensils are placed in the way that the spray arms can rotated freely during washing

NOTE: Very small items should not be washed in the dishwasher as they could easily fall out of the basket

- Load hollow items such as cups glasses pans etc With the opening downwards so that water cannot collect in the container or a deep base
- Dishes and cutlery must not lie inside one another or cover each other
- To avoid damage to glasses they must not touch
- Load large items which are most difficult to clean into the basket
- Long bladed knives stored in an upright position are a potential hazard!
- Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the basket
- Please do not overload your dishwasher This is important for good results and for reasonable energy consumption

Loading the Basket

Position the dishes and cookware so that they will not get moved by the spray of water

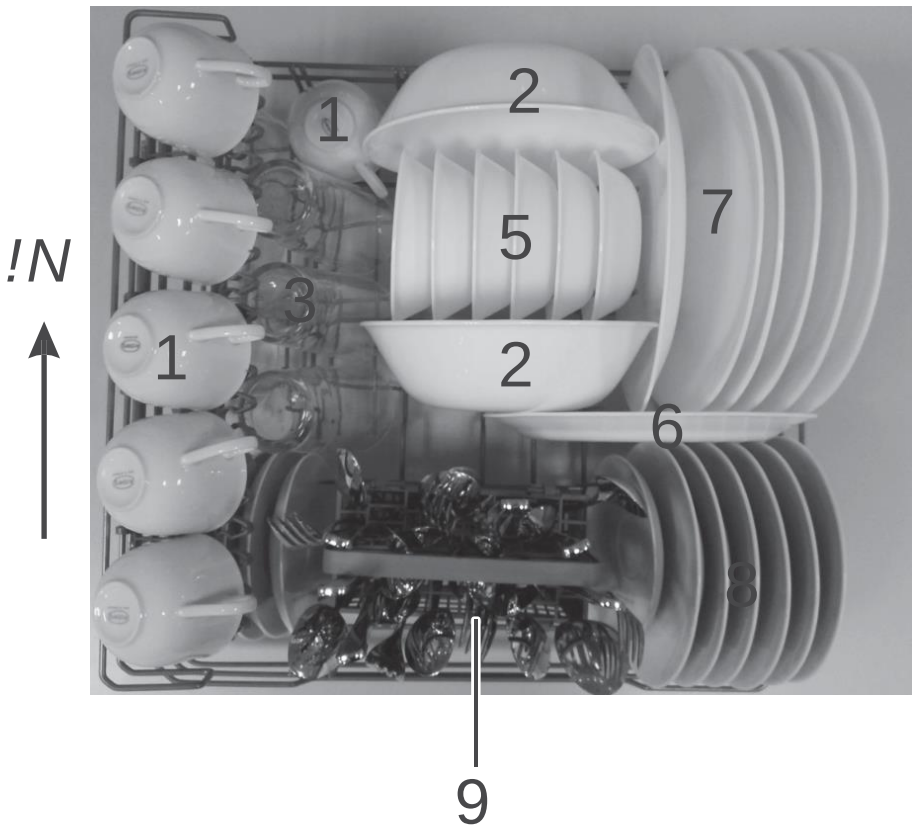

1 Cups	2 Serving bowl
3 Glasses	Saucers
5 Fruit bowl	6 Oval platter
7 Dinner plates	8 Bread and butter plates
9 Cutlery basket	

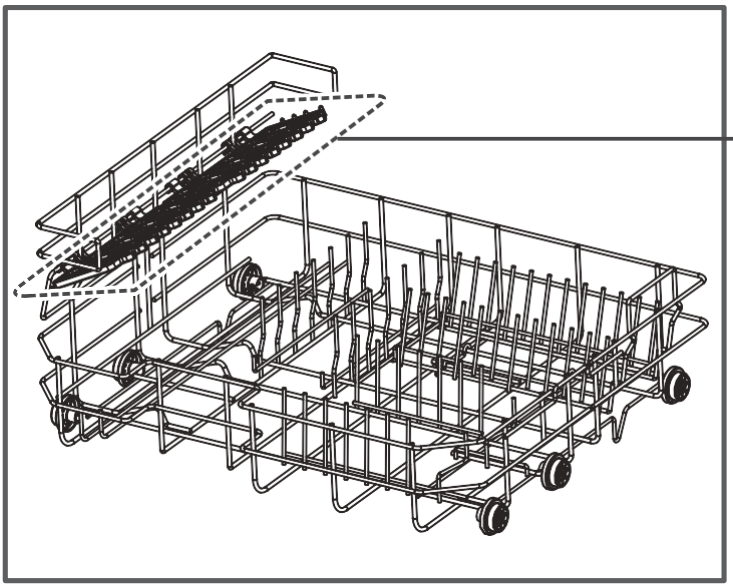

Cup Rack Basket

The basket is fitted with plate racks which can be stowed horizontal if required

Cutlery Basket

Cutlery should be placed in the cutlery basket with handles at the bottom !f the rack has side baskets the spoon should be loaded individually into the appropriate slots especially long utensils should be placed in the horizontal position at the front of the upper basket as shown

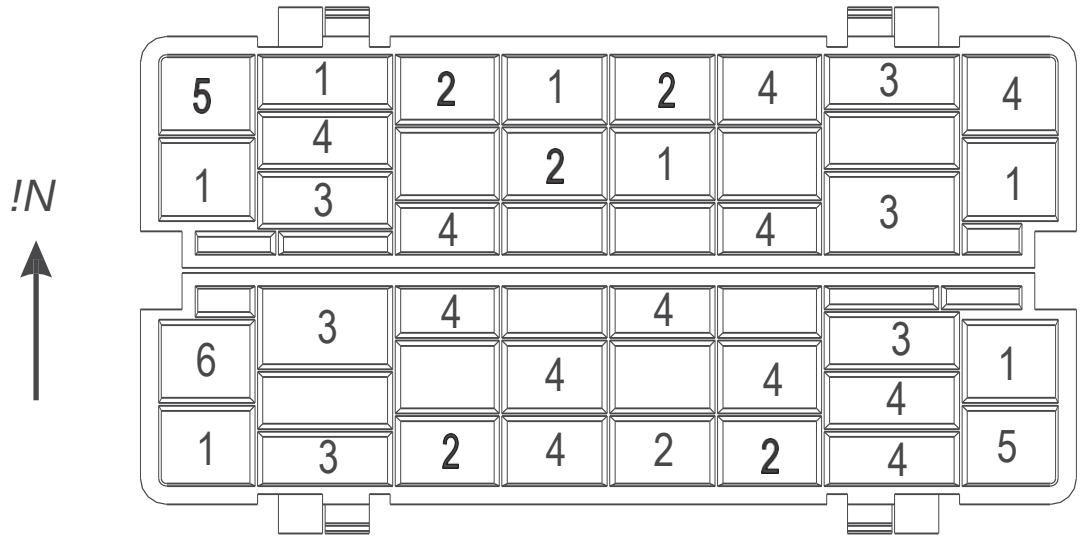

1	Dinner forks
2	Salad forks
3	Knives
4	Teaspoons
&	Serving spoons
%	Serving forks

⚠WARN!NG!

- Do not let any item extend through bottom
- Always load sharp utensils with the sharp point down!

For personal safety and a top quality clean place the silverware in the basket:

- **So they do not nest together**
- **With handles facing down**
- **Sharp knives and other potentially dangerous utensils with handles facing up**

5 Starting a Washing Program

Wash Cycle Table

NOTE

- (★) *!eans need to fill rinse into the "inse#$id %ispenser.*
- *&$'$! %(#)#*++, This program is the test cycle, the rinse#aid dispenser setting is recommended to - osition ..*

Program	Cycle Selection !nformation	Description of Cycle	Detergent pre/main	Running time(min)	Energy (Kwh)	Water (l)	Rinse Aid
Heavy	For the heaviest soiled loads such as pots pans casserole dishes and dishes that have been sitting with dried food on them for a while	Pre-wash Pre-wash(50¡) Wash (55¡) Wash (50¡) Rinse Rinse (68¡) Drying	)/g	100	0 9	12 5	★
No rmal (*AHAM DW-1-2005)	For normally soiled loads such as pots plates glasses and lightly soiled pans standard daily cycle	Pre-wash Pre-wash Wash (52¡) Rinse Rinse (65¡) Drying	)/g	110	0 36	10 8	★
BabyCare	For lightly soiled loads such as glasses crystal and fine china	Pre-wash Pre-wash (50¡) Wash (55¡) Rinse Rinse Rinse(70¡) Drying	)/g	90	0 51	12 5	★
ECO ECO	For lightly soiled loads such as glasses crystal and fine china	Pre-Wash Pre-Wash(50¡) Wash(50¡) Rinse Rinse(60¡) Drying	18g	75	0 27	10	★
Glass	For lightly soiled crockery and glass	Pre-Wash Wash(50¡) Rinse Rinse(60¡) Drying	),g	70	0 28	8 5	★
Speed	A shorter wash for lightly soiled loads that do not need drying	Pre-wash Pre-wash(50¡) Wash (50¡) Rinse Rinse(55¡)	15g	5	0 31	10 5	★
Rinse	Use for rinsing dishes¢ glasses and silverware that will not be wash right away	Pre-wash Main-wash	/	2	0 03	3	
Mini-party	For lightly soiled loads such as glasses crystal and fine china	Main Wash(5¡) Rinse Rinse(50¡)	),g	20	0 18	6 5	

Turning On the Appliance

Starting a wash cycle:

1 Draw out the basket(see the section entitled "Loading the Basket ");
2 Pour in the detergent (see the section entitled "Detergent and Rinse Aid ");
3 !nsert the plug into the socket The power supply is 120V/60 Hz;
Make sure that the water supply is turned on to full pressure;
5 Close the door and press the on/off button to turn on the power supply;
6 Press the program button to select wash program you need
4ea5y678orma,67Ba0y+are679+O67:,ass67Spee 673inse67*ini6party
7 Then press the Start/Pause button until dishwasher begins to start

NOTE

When you press the Start/Pause button to pause during washing the display time will stop blinking and the program will pause and remain this cycle till you restart it again

Change the Programs

Premise: You can modify the washing program at the beginning of the cycle Otherwise the detergent may have already been released and the appliance may have already drained the wash water !f this is the case the detergent dispenser must be refilled (see the section entitled " Loading the Detergent ")

To change the washing program press the Start/pause button to pause the machine then press the program button more than three seconds to set the machine into standby then you can change the program to the desired cycle setting
(See the section entitled " Starting a wash cycle ")

The lights show the state of the dishwasher:
a) All phase lights off----------Stand by
b) The display no blinking ----------Paused
c) The display blinking ----------Running

NOTE: !f you open the door when washing the machine will pause When you close the door you need press start/pause button to continue the cycle

Forgot to Add a Dish?

A forgotten dish can be added any time before the detergent cup opens

1 Press the start/pause button

2 Open the door a little to stop the washing

3 After the spray arms stop working you can open the door completely

4 Add forgotten dishes

5 Close the door

6 Press the start/pause button the dishwasher will run after 10 seconds

At the End of the Wash Cycle

When the working cycle has finished the buzzer of dishwasher will sound for 8 seconds then stop Turn off the appliance using the ON/OFF button shut off the water supply and open the door of the dishwasher
Wait a few minutes before unloading the dishwasher to avoid handling the dishes and utensils while they are still hot and more susceptible to breakage They will also dry better
Since the appliance is standing by it will power off automatically after 30 minutes without any operation

Switch Off the Dishwasher

All the phase lights are off only in this case the program has ended
1 Switch off the dishwasher by pressing the ON/OFF button
2 Turn off the water tap!

Open the door carefully

Hot dishes are sensitive to cold shock The dishes should therefore be allowed to cool down around 15 minutes before removing from the appliance
Open the dishwasher's door leave it ajar and wait a few minutes before removing the dishes !n this way they will be cooler and the drying will be improved

Unloading the dishwasher

!t is normal that the dishwasher is wet inside

WARN!NG! !t is dangerous to open the door when washing because the hot water may scald you

6 Maintenance and Cleaning

Filtration System

The filter prevent larger remnants of food or other objects from getting inside the pump

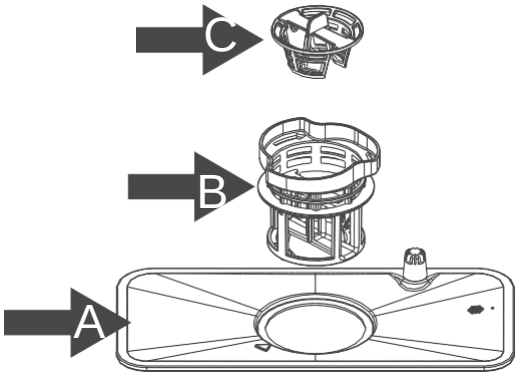

The filter system consists of a coarse filter a flat (main filter) and a micro filter (fine filter)

Main filter A

Food and soil particles trapped by this filter are pulverized by a special jet on the spray arm and washed down to drain

Fine filter B

This filter holds soil and food residue in the sump area and prevents it from being deposited on the dishes during wash cycle

Coarse filter C

Larger items such as pieces of bone or glass that could block the drain are trapped in the coarse filter To remove the items caught by the filter gently squeeze the tap on the top of this filter and lift out

Filter Assembly

The filter efficiently removes food particles from the wash water allowing it to be recirculated during the cycle For best performance and results the filter assembly must be regularly cleaned For this reason it is a good idea to remove the larger food particles trapping in the filter after each wash cycle by rinsing the filter and cup under running water To remove the filter assembly pull on the cup handle in the upward direction

⚠ WARN!NG!

Never run the dishwasher without the filters in place
The dishwasher must never be used without the filters
!mproper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils

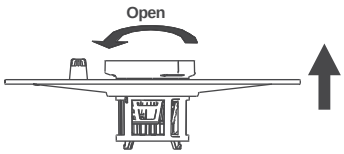

Step1YTwist the filter assembly(A B and C) counterclockwise then lift it all up

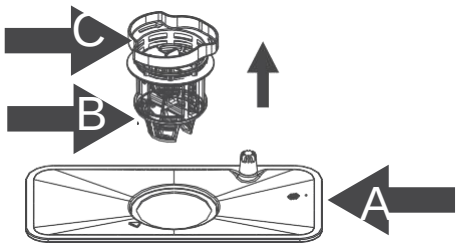

Step2: Lift B and C up from A;

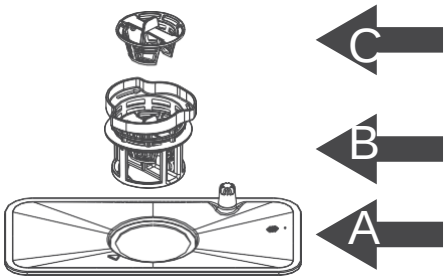

Complete

NOTE: *To re#install the filter system, complete 0tep., 0tep*, and finally, 0tep).*

Remarks:

- !nspect the filters for blocking every time the dishwasher has been used
- By unscrewing the coarse filter you can remove the filter system Remove any food remnants and clean the filters under running water

⚠ ***NOTE*** The entire filter assembly should be cleaned once a week

Cleaning The Filter

To clean the coarse filter and the fine filter use a cleaning brush Reassemble the filter parts as shown in the figures in the last page and reinsert the entire assembly in the dishwasher positioning in its seat and pressing downward

⚠ **WARN!NG!** When cleaning the filters don't knock on them Otherwise the filters could be contorted which could negatively impact dishwasher performance

Caring for the Dishwasher

The control panel can be cleaned by using a lightly dampened cloth and dry thoroughly

The exterior use a good appliance polish wax

Never use sharp objects scouring pads or harsh cleaners on any part of the dishwasher

Cleaning The Door

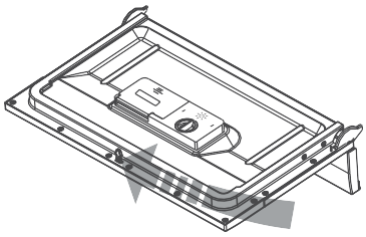

To clean the edge around the door you should use only a soft warm damp cloth To avoid penetration of water into the door lock and electrical components do not use a spray cleaner of any kind

⚠ **WARN!NG!** Never use a spray cleaner to clean the door panel as it may damage the door lock and electrical components
Abrasive agent or some paper towel should not be used because of the risk of scratching or leaving spots on the stainless steel surface

Protection Against Freezing

Please take frost protection measures on dishwasher in winter After each wash cycle please operate as follows:

1 Cut off electrical power to the dishwasher
2 Turn off the water supply and disconnect the water inlet pipe from the water valve
3 Drain water from the inlet pipe and water valve (Use a pan to catch the water)
Reconnect the water inlet pipe to the water valve
5 Remove the filter at the bottom of the tub and use a sponge to use up water in sump

⚠ ***NOTE*** *1f your dishwasher cannot wor2 because of the ice, please contact professional service persons.*

Cleaning the Spray Arms

The spray arms can be easily removed for periodic cleaning of the nozzles to prevent possible clogging Wash them under running water and carefully replace them in their seats checking that their rotary movement is in no way impeded

Grasp the middle of the spray arm pull it upwards to remove it Wash the arms under a jet of running water and return them carefully to their seat After reassembly check that the spray arms turn freely Otherwise check that they have been installed correctly

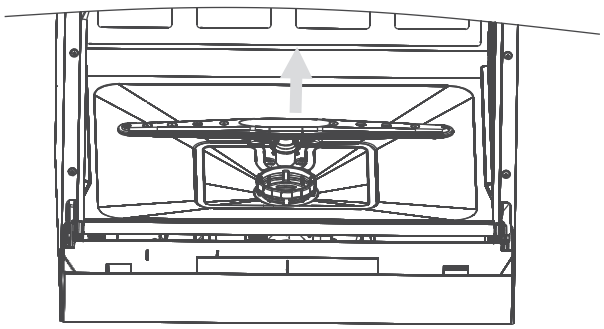

How to Keep Your Dishwasher in Shape

■ After Every Wash

After every wash turn off the water supply to the appliance and leave the door slightly open so that moisture and odors are not trapped inside

■ Remove the Plug

Before cleaning or performing maintenance always remove the plug from the socket

■ No Solvents or Abrasive Cleaning

To clean the exterior and rubber parts of the dishwasher do not use solvents or abrasive cleaning products Only use a cloth with warm soapy water

To remove spots or stains from the surface of the interior use a cloth dampened with water with a little vinegar or a cleaning product made specifically for dishwashers

■ When it is not in need for a long time

!t is recommend that you run a wash cycle with the dishwasher empty and then remove the plug from the socket turn off the water supply and leave the door of the appliance slightly open This will help the door seals to ast longer and prevent odours from forming within the appliance

■ Moving the Appliance

!f the appliance must be moved try to keep it in the vertical position !f absolutely necessary it can be positioned on its back

■ Seals

One of the factors that cause odors to form in the dishwasher is food that remains trapped in the seals Periodic cleaning with a damp sponge will prevent this from occurring

7 !nstallation !nstructions

!nstallation Preparation

The installation position of dishwasher should be near the existing inlet and drain hoses and power cord

One side of the cabinet sink should be chosen to facilitate the connection of drain hoses of the dishwasher

Positioning the Appliance

Position the appliance in the desired location The back should rest against the wall behind it and the sides along the adjacent cabinets or wall The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation

About Power Connection

⚠ WARN!NG!

For personal safety:
DO NOT USE AN EXTENS!ON CORD OR AN ADAPTER PLUG W!TH TH!S APPL!ANCE
DO NOT UNDER ANY C!RCUMSTANCES CUT OR REMOVE THE EARTH!NG CONNECT!ON FROM THE POWER CORD

Electrical Requirements

Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply Use the required fuse 10 amp time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance

Electrical Connection

⚠ Insure proper ground exists before use

Ensure the voltage and frequency of the power being corresponds to those on the rating plate Only insert the plug into an electrical socket which is earthed properly !f the electrical socket to which the appliance must be connected is not appropriate for the plug replace the socket rather than using a adaptors or the like as they could cause overheating and burns

GROUND!NG !NSTRUCT!ONS

This appliance must be earthed !n the event of a malfunction or breakdown earthing will reduce the risk of electric shock by providing a path of least resistance for the electric current This appliance is equipped with a cord having an equipment-earthing conductor and an earthing plug The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local standards and requirements

⚠ WARN!NG!

!mproper connection of the equipment earthing conductor can result in the risk of an electric shock
Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly earthed
Do not modify the plug provided with the appliance !f the plug does not fit properly to the outlet please have a qualified electrician to install a proper outlet

Water Connection

Back View

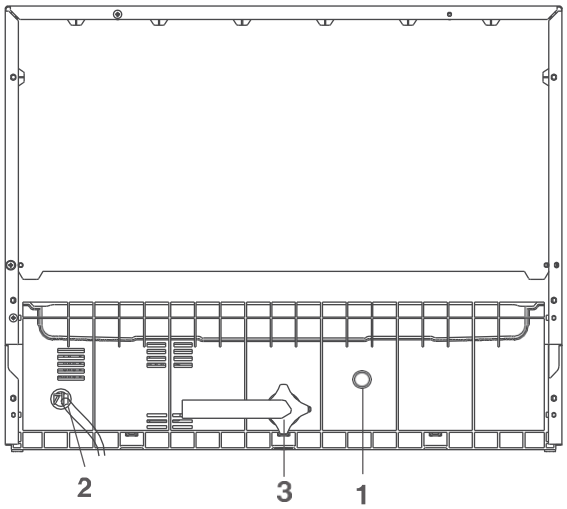

Rear of Dishwasher:
1. Drain Port
2. Power Cord
3. Inlet Port

Your dishwasher comes equipped with a 'quick connect' assembly (includes inlet and drain hose) The faucet adapter must be installed on the faucet before you can connect the dishwasher This adapter is included inside your dishwasher The faucet adapter is compatible with faucets inclusive of either male (outside) or female (inside) threaded faucet connections

Quick Connect Assembly

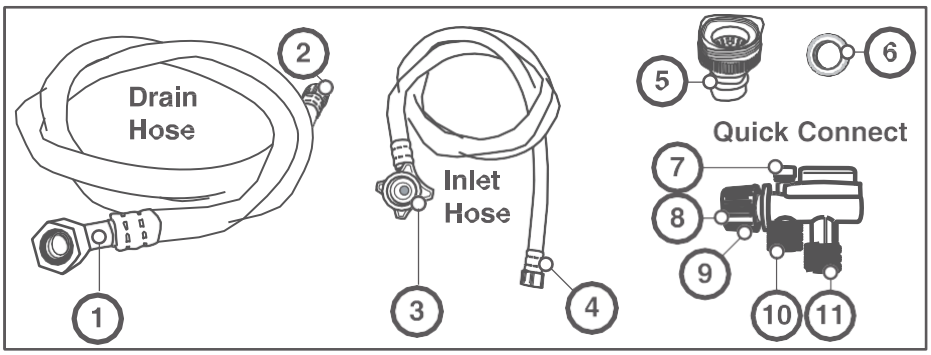

Quick Connect Assembly
Drain Hose:
1. Drain port connection
2. Quick connect connection

Inlet Hose:
3. Inlet port connection
4. Quick connect connection

Faucet Adapter:
5. Faucet Adapter
6. Faucet washer

Quick Connect:
7. Pressure relief valve
8. Faucet adapter connection
9. Locking collar
10. Inlet hose connection
11. Drain hose connection

⚠ WARN!NG!

!n order to avoid that there is more water staying in the inlet hose please close the faucet after using

1 Screw the faucet adapter onto (or into) the faucet tap Check for leaks (use Teflon tape to eliminate if necessary)
2. Connect the six-sided connection of the drain hose to the drain port connection on the back of the dishwasher cabinet Do not over-tighten (to avoid damage to threads)
3. Connect the star-shaped connection of the inlet hose to the inlet port on the back of the dishwasher cabinet Do not over-tighten (to avoid damage to threads)
4. Connect the circular connection of the drain hose onto the longer (bottom) male connection on the quick connect
&. Connect the circular connection of the inlet hose onto the shorter (top) male connection on the quick connect
%. Attach the quick connect onto the faucet adapter by pulling down the outer locking collar on the quick connect while pushing the quick connect upward onto the faucet adapter
-. When the quick connect snaps onto the faucet adapter release the locking collar Verify the connection is secure
.. Slowly open the hot water line and check for any sign of water leaks at all hose connections !f leaks are located immediately close the water supply and repair the hose connections

Important

1 Once you open the water supply line (even if it is closed immediately thereafter) the inlet hose will be pressurized
2 To relieve water pressure from inside the inlet hose (make sure the water line (faucet) is closed): press and hold the red pressure relief button on the quick connect until the flow of water stops

'138l8:

F1lLU39 /O 39Ll9;9 '1/93 (39SSU39, B9FO39 "lS+O889+/l8: /49 <Ul+=6+O889+/ F3O* /49 F1U+9/, 'lLL 39SUL/ l8 B1+=6(39SSU39 O;936S(31>. /49 /9*(931/U39 OF l8+O*l8:'1/93 +18 B9;93> 4O/, 18" B1+=6(39SSU39 O;936S(31> +OUL" +1US9 S9;939 BU38S 18"?O3 S+1L"l8:.

"18:93

"O 8O/ L9/ +4IL"398 "lS+O889+/ /49 "lS4'1S493@ +LOS9 SU(93;lSlO8 OF +4IL"398 lS 1L'1>S l*(O3/18/ 13OU8" 1((Ll18+9S.

8O/9A

4ar #ater con itions #i,, a 5erse,y affect t!e #as!ing performance of your is!#as!er. 4ar #ater con itions #i,, a,so contri0ute to B,meB C#!ite fi,m su0stance) eposits an ?or Bsca,ingB on t!e stain,ess stee, surface of t!e is!#as!er tu0 an !eater e,ement, ,ocate in t!e sump un erneat! t!e remo5a0,e fi,ter screen. /o assist in minimiDing t!ese con itions, it is recommen e to perio ica,,y operate?rinse t!e insi e of t!e is!#as!er Cempty) using 1 cup of #!ite 5inegar at ,east once a #ee$.

"isconnecting your "is!#as!er

1. Shut off the water supply at the faucet
2. Disconnect the power supply cord

Starting the Dishwasher

The following things should be checked before starting the dishwasher

1. The dishwasher is level and fixed properly
2. The inlet valve is open
3. There is a leakage at the connections of the conducts
4. The wires are tightly connected
5. The power is switched on
6. The inlet and drain hoses are knotted
7. All packing materials and printings should be taken out from the dishwasher

Attention: *$fter installation, please ma2e sure to 2eep this manual. The content of this manual is very helpful to the users.*

8 Troubleshooting Tips

Before Calling for Service

Review the charts on the following pages may save you from calling for service

	Problem	Possible Causes	What To Do
Technical problems	*Dishwasher doesn't start*	Fuse blown or the circuit breaker tripped	Replace fuse or reset circuit breaker Remove any other appliances sharing the same circuit with the dishwasher
		Power supply is not turned on	Make sure the dishwasher is turned on and the door is closed securely Make sure the power cord is properly plugged into the wall socket
		Door of dishwasher not properly closed	Closed dishwasher making sure that door latches
	Water not pumped from dishwasher	Kink in drain hose	Check drain hose
		Filter clogged	Check the coarse filter (see section titled " Cleaning The Filter ")
		Kitchen sink clogged	Check kitchen sink to make sure it is draining well !f problem is kitchen sink not draining you may need a plumber rather than a serviceman for dishwasher
General problems	*Suds in the tub*	!mproper detergent	Use only the special dishwasher detergent to avoid suds !f this occurs open the dishwasher and let suds evaporate Add 1 gallon of cold water to the tub Close and latch the dishwasher then Start the "soak" wash cycle to drain out the water Repeat if necessary
		Spilled rinse-aid	Always wipe up rinse-aid spills immediately
	Stained tub interior	Detergent with colourant was used	Make sure that the detergent is the one without colourant
	White film on inside surface	Hard water minerals	To clean the interior use a damp sponge with dishwasher detergent and wear rubber gloves Never use any other cleaner than dishwasher detergent for the risk of foaming or suds
Noise	*Knocking noise in the wash cabinet*	The spray arm is knocking against an item in a basket	!nterrupt the programme and rearrange the items which are obstructing the spray arm
	Rattling noise in the wash cabinet	!tem of crockery are insecure in the wash cabinet	!nterrupt the programme and rearrange the items of crockery
	Knocking noise in the water pipes	This may be caused by on-site installation or the cross-section of the piping	This has no influence on dishwasher function if in doubt contact a suitably qualified plumber

	Problem	Possible Causes	What To Do
Poor Washing Result	*The dishes are not clean*	The dishes were not loaded correctly	See notes in " Loading the Dishwasher Baskets "
		The program was not powerful enough	Select a more intensive programme See" Wash Cycle Table "
		Not enough detergent was dispensed	Use more detergent or change your detergent
		!tem are blocking the path of spray arms	Rearrange the items so that the spray can rotate freely
		The filter combination in the base of wash cabinet is not clean or is not correctly fitted This may cause the spray arm jets to get blocked	Clean and/or fit the filter combination correctly Clean the spray arm jets See "Cleaning the Spray Arms"
	Cloudiness on glassware	Combination of soft water and too much detergent	Use less detergent if you have soft water and select a shortest cycle to wash the glassware and to get them clean
	Black or gray marks on dishes	Aluminum utensils have rubbed against dishes	Use a mild abrasive cleaner to eliminate those marks
	Detergent left in dispenser cups	Dishes block detergent cups	Re-loading the dishes properly
Poor Drying Result	*The dishes are not drying*	!mproper loading	Load the dishwasher as suggested in the directions
		Too little rinse-aid	!ncrease the amount of rinse-aid/Refill the rinse-aid dispenser
		Dishes are removed too soon	Do not empty your dishwasher immediately after washing Open the door slightly so that the steam can escape Begin unloading the dishwasher only once t he dishes are barely warm to the touch Empty the low basket first This prevents water form dropping off dishes in the upper basket
		Wrong program selection	!n short program the washing temperature is lower This also lowers cleaning performance Choose a program with a long washing time
		Using cutlery with a low-quality coating	Water drainage is more difficult with these items Cutlery or dishes of this type are not suitable for washing in the dishwasher

Error Codes

When some malfunctions come on the appliance will display error codes to warn you:

Codes	*Meanings*	*Possible Causes*
E1	Longer inlet time	Faucets is not opened or water intake is restricted or water pressure is too low
E3	Not reaching required temperature	Malfunction of heating element
E	Overflow	Some element of dishwasher leaks
Ed	Failure of communication between main PCB with TFT PCB	Open circuit or break of wiring for the communication

⚠ WARN!NG!

!f overflow occurs turn off the main water supply before calling a service
!f there is water in the base pan because of an overfill or small leak
the water should be removed before restarting the dishwasher

Technical !nformation

5

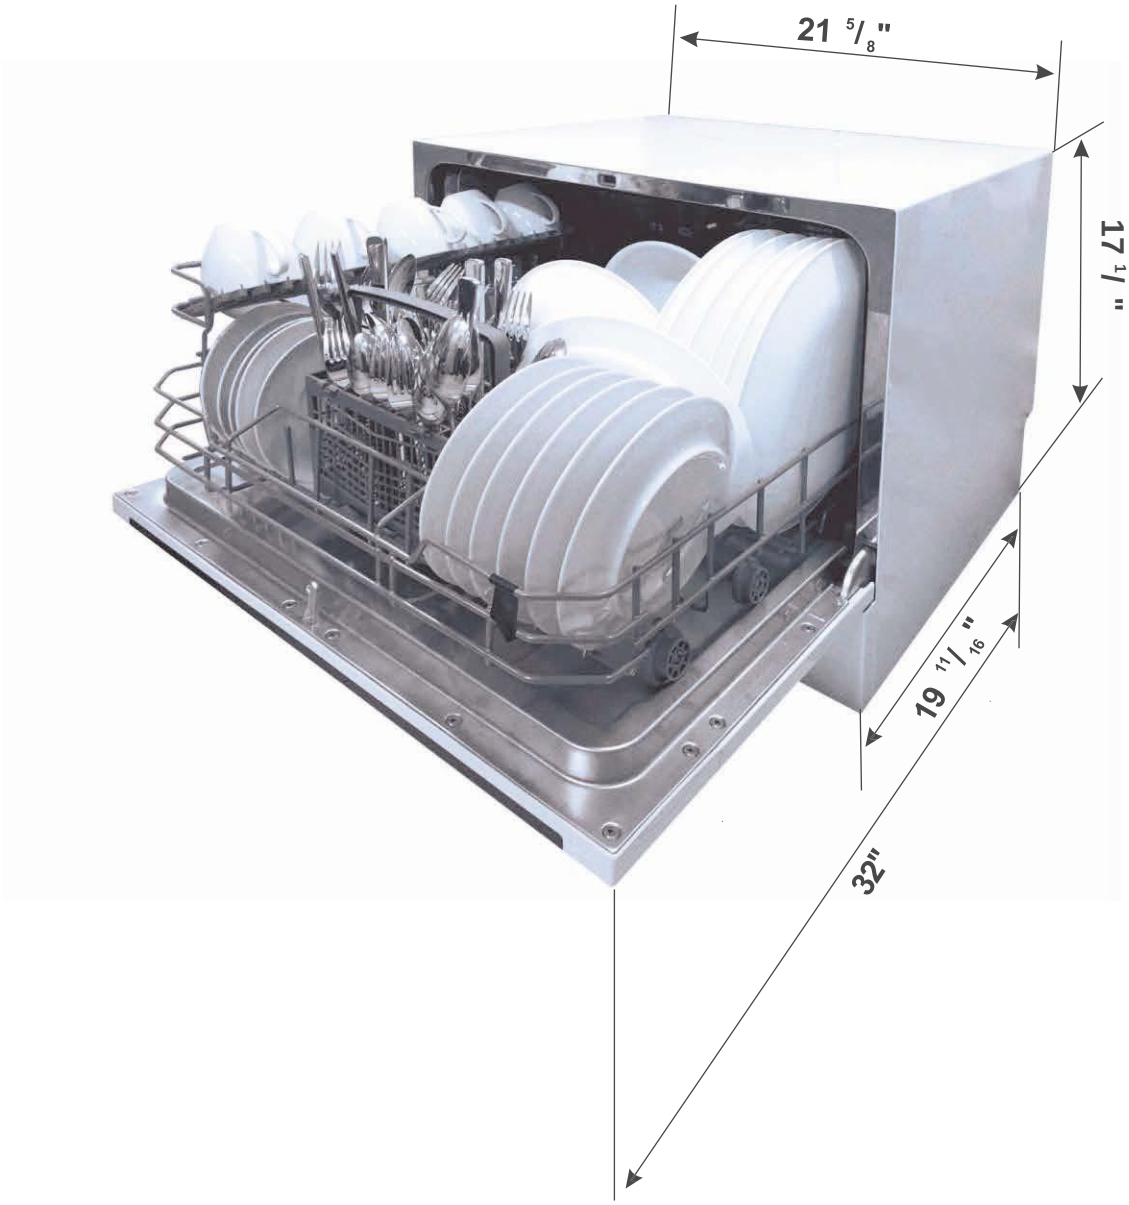

Height :	17[1]/ "(38mm)
Width :	21[5]/ [8] "(550mm)
Depth :	19[11]/ [16] "(500mm)
Voltage connected Load :	see rating label
Water pressure:	0 0 -1 0MPa
Hot water connection :	should be 120 °F
Capacity:	6 place settings

9 1 YEAR LIMITED WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover wear from normal use or operation that does not comply with the instruction manual or damages to the product resulting from accident, alteration, abuse, or misuse.This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the label.

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for particlular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you.

Customer Service Phone : 1-866-646-4332